 



Godox

# GMC-U3

 Monitor Camera Control Cable (Type-C USB)



说明书 | Instruction Manual

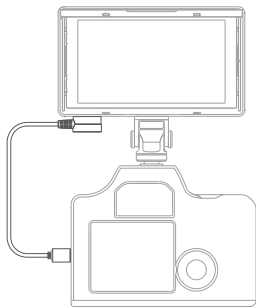

## 安装前

请根据相机型号选择与之匹配的相机控制线。

## 产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

|       |      |      |
|-------|------|------|
| 产品信息  | 型号   | 产品条码 |
| 用户信息  | 姓名   | 联系电话 |
|       | 通信地址 |      |
| 销售商信息 | 名称   |      |
|       | 联系电话 |      |
|       | 通信地址 |      |
|       | 销售日期 |      |
| 备注    |      |      |

注：此表应由销售商盖章确认。

## 前言

此产品属于即插即用配件，与本公司触摸屏监视器 GM55 搭配使用。连接此相机控制线，GM55 可通过控制菜单或设备面板的快捷键进行相机控制。请按需购买。请仔细阅读本说明书，以便能正确的操作，发挥本产品的优越性能。

## 产品特点

- 采用 TPE 线材接头，可经受反复弯曲插拔；
- 采用喷砂工艺，不生锈，耐腐蚀；
- 多层安全保护，防刮耐磨抗氧化；
- 工艺精湛，持久耐用；
- 严格测试，安全护航。

## 产品型号及适配相机型号

 
提示：适配相机型号支持列表会持续更新，如有需要请登录公司网站查看相机控制线最新适配列表。

| 相机控制线  | 相机端接口      | 线长   | 适配相机型号                                                               |
|--------|------------|------|----------------------------------------------------------------------|
| GMC-S1 | Multi      | 60CM | Sony A77II, Sony RX10, Sony A7R, Sony A9                             |
| GMC-U1 | Micro USB  | 60CM | Canon 850D, Canon 200D II, Canon 7D II                               |
| GMC-U2 | Mini USB   | 60CM | Canon 1500D, Canon 3000D, Canon 6D, Canon 800D, Canon 5D, Nikon D610 |
| GMC-U3 | USB Type-C | 60CM | Canon M2 II, Canon M6 II, Lumix S1R                                  |

## 警告

- △ 请勿私自拆卸产品！
- △ 请保持干燥！
- △ 请勿在易燃易爆环境中使用！在这些场合下，请注意相关警告标识。
- △ 请仔细阅读并遵守由厂商提供的警告或指示。

## 安装相机控制线

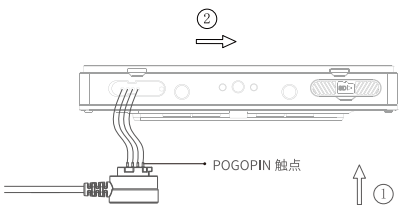

- 掀开监视器端相机控制接口的胶套，转到一边。
- 将相机控制线接头 (POGOPIN 触点端) 与监视器端接口对齐后压入 (如图箭头 1 方向)，然后向箭头 2 方向滑动以卡住相机控制线。
- 再分别连相机控制线和 HDMI 线至相机和监视器。

注意：如果线过长，可用扎带固定。

## 操作使用

此产品属于即插即用配件，将相机控制线连接于监视器与相机相应的位置即可。

- 使相机和监视器均处于开机状态，看到所拍摄画面；
  - 从屏幕右侧边缘向左侧滑动调出相机控制菜单界面，如正常连接，菜单底色会变亮，可操作各功能。如需关闭请单击屏幕视频区域即可。
- 提示：如果未能调出相机控制菜单，请检查是否已开启触摸功能或“相机控制”是否为“开”。
- 当“相机控制”和“相机映射”为“开”时，将相机控制触摸按键功能映射到 F2-F6 中。
  - 当“相机映射”为“关”时，F2-F6 为快捷键功能。
  - 当“相机映射”为“开”时，触摸屏的相机控制菜单不会被展示。

## 不适用保修的情况

如产品存在下列情况，本文件项下的保证和服务将不适用 ① 产品或部件超过相应保修期；② 错误或不适当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水湿或潮湿环境；③ 由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④ 产品或部件原有识别信息被修改变更或删除；⑤ 无有效保修卡；⑥ 使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；⑦ 因不可抗力或意外事件造成的故障或损坏；⑧ 其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色、磨损和消耗，不是保修范围内的故障。

## 产品信息

本文件适用于相关《产品保修信息》(见后面说明)所列产品，其他非属此范围的产品或部件 (如促销品、赠品及其他出厂后附加的部件等) 不在此保修承诺内。

 
## 保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。


## 如何获得保修服务

要保修服务，您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们可确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

## 产品接口型号图

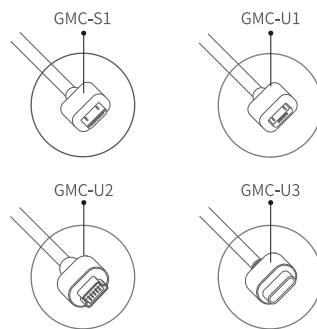

## 取出相机控制线

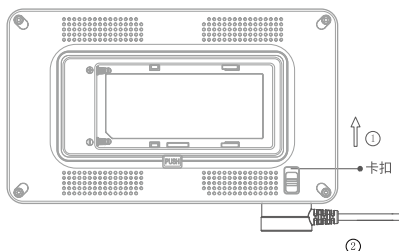 

相机控制线背面卡扣推向另一侧 (如图箭头 1 方向)。向箭头 2 方向滑动取出相机控制线。

## 产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

| 产品类别 | 选件名称                                     | 保修期(月) | 保修服务类型 |
|------|------------------------------------------|--------|--------|
| 部件   | 电路板                                      | 12     | 客户送修   |
|      | 电池                                       | 3      | 客户送修   |
|      | 充电器、电源线，同步线等带电性能的部件。                     | 12     | 客户送修   |
| 其他   | 如电池盒、防风棉、防风毛罩、锁紧装置、手提绳、扎带、魔术贴、领夹、便携袋、包装等 | 无      | 无保修    |

神牛产品售后服务电话 0755-29609320-8062

## 标配物品

 


## 相机控制线安装说明

示例：搭配本公司触摸屏监视器 GM55 使用。



## 附：GM55相机控制功能按键介绍

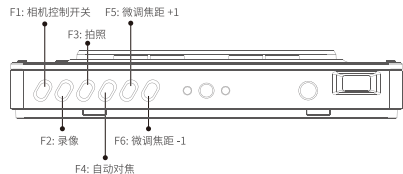

- F1: 相机控制开关
- F2: 录像 (每点一次在录制和停止录制之间切换)
- F3: 拍照 (点击即拍照)
- F4: 自动对焦
- F5: 调焦 +1, 微调焦距 +
- F6: 调焦 -1, 微调焦距 -
- 卡扣
- 调焦 +5, 快速调焦距 +
- 调焦 -5, 快速调焦距 -

注：如监视器升级，按键功能变动，或更详尽指引，请参照 GM55 实时说明书。

## Forward

Thank you for purchasing! This monitor camera cable is a plug and play accessory cable for Godox 5.5"4K HDMI Touchscreen On-Camera Monitor GM55. With this cable, the GM55 monitor can realize the function of camera control. Read this manual carefully before using to make sure the correct operation and exert the optimum function.

## Product Features

- TPE fixed wire connector, ensures it has long using life span;
- Adopt sandblasting process, guarantee it anti-rust and corrosion resistance;
- Protected completely, Scratch-proof and antioxidant;
- Consummate craft, long-lasting;
- Rigorous testing and security.

## Declaration of

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU. They are allowed to be used in all EU member states

For more information of DoC, Please click this web link:  
[https://www.godox.com/DOC/Godox\\_GMC\\_Series\\_DOC.pdf](https://www.godox.com/DOC/Godox_GMC_Series_DOC.pdf)

## Product Mode and Compatibility

 
| Product Model | Camera Interface | Cable Length | Camera Model                                                         |
|---------------|------------------|--------------|----------------------------------------------------------------------|
| GMC-S1        | Multi            | 60CM         | Sony A77II, Sony RX10, Sony A7R, Sony A9                             |
| GMC-U1        | Micro USB        | 60CM         | Canon 850D, Canon 200D II, Canon 7D II                               |
| GMC-U2        | Mini USB         | 60CM         | Canon 1500D, Canon 3000D, Canon 6D, Canon 800D, Canon 5D, Nikon D610 |
| GMC-U3        | USB Type-C       | 60CM         | Canon M2 II, Canon M6 II, Lumix S1R                                  |

Note: The compatibility list will continue to be updated. If necessary, please login [www.godox.com](http://www.godox.com) for the latest compatibility list.


## Warning

- ⚠ Don't disassemble!
- ⚠ Always keep this product dry!
- ⚠ Do not leave the product in the presence of flammable gas. In certain circumstance, please pay attention to the relevant warning.
- ⚠ Please carefully read and observe the warning or direction offered by the manufacture.

## Product Interface

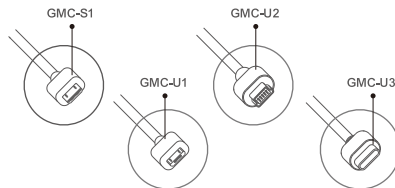


## Cable Removal Guide

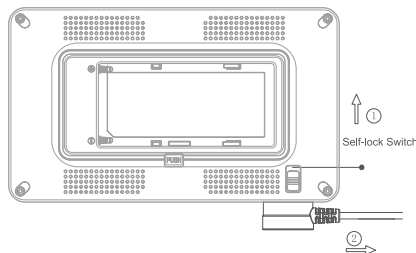 



- Push the Self-lock Switch on the back of the monitor to the other side (as shown in the direction of arrow 1).
- Slide the camera control cable interface in the in the direction of arrow 2 and then gently take it out.

## What's in the box

 


## Operating instructions

  Example: Use with the GM55.

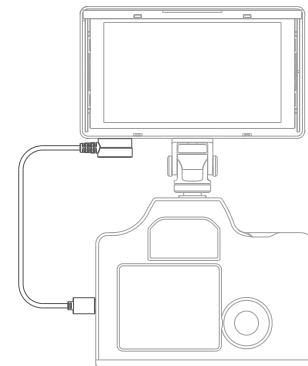

## Before installation

 Please select suitable cable according to the camera model.

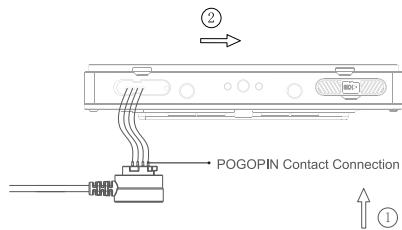


- Remove the rubber plug of the camera control port and turn to another side.
- Insert the camera control cable (the end with POGOPIN Contact Connection) into camera control port of GM55 (as shown in the direction of arrow 1). And then slide this end to lock it in the direction 2.
- Connect the camera control cable and the HDMI cable to the camera and monitor respectively.

## Operation and usage

 Connect the camera and GM55 monitor with this camera control cable followed the instruction above.

- Turn on the camera and the GM55.
- Slide leftwards from the screen edge on the right to pop-up the camera control menu of GM55. Single-click the hidden menu in the video area can also pop up or hide the menu as required.
- When camera control and camera mapping is switched on, the touch camera control menu will not be displayed. Then, the buttons F2-F6 on the top of GM55 are shortcut buttons of camera control.
- When the camera mapping is switched off, the custom shortcut buttons will restore.

## Postscript: GM55 Camera Control Buttons Description

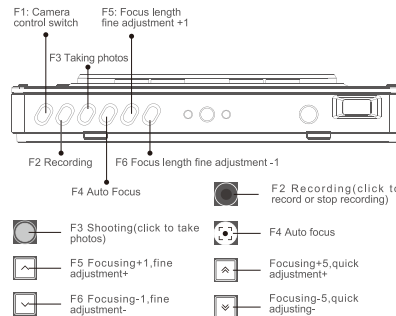

Note: Such as monitor upgrade, button function changes, or more detailed instructions, please refer to the GM55 real-time instruction manual for reference.

## Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

| Product Information  | Model        | Product Code Number |
|----------------------|--------------|---------------------|
| Customer Information | Name         | Contact Number      |
|                      | Address      |                     |
| Seller Information   | Name         | Contact Number      |
|                      | Address      |                     |
|                      | Date of Sale |                     |
|                      | Note         |                     |

Note: This form shall be sealed by the seller.

Ver:1.1



神牛摄影公司  
Godox Photo Equipment Co., Ltd.

合格证  
QC PASS

## 深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道锦尾社区福川工业区厂房2栋  
 电话: +86-755-29609320(8062) 传真: +86-755-25723423  
 邮箱: [godox@godox.com](mailto:godox@godox.com)

GODOX Photo Equipment Co., Ltd.  
 Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen 518103, China  
 Tel: +86-755-29609320(8062) Fax: +86-755-25723423  
 E-mail: [godox@godox.com](mailto:godox@godox.com)

godox.com

Made In China



## Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

## Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

## How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

## Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. The product or accessory has expired its warranty period; ②. Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③. Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④. The original identifying information of product or accessory is modified, alternated, or removed; ⑤. No valid warranty card; ⑥. Breakage or damage caused by using illegally authorized, non-standard or non-public released software; ⑦. Breakage or damage caused by force majeure or accident; ⑧. Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

## Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

| Product Type | Name                                                                                                        | Maintenance Period(month) | Warranty Service Type                         |
|--------------|-------------------------------------------------------------------------------------------------------------|---------------------------|-----------------------------------------------|
| Parts        | Product Main Body                                                                                           | 12                        | Customer sends the product to designated site |
|              | Battery                                                                                                     | 3                         | Customer sends the product to designated site |
|              | Charger, Power Cable, Sync Cable, Electrical Parts etc.                                                     | 12                        | Customer sends the product to designated site |
| Other Items  | Battery Case, Windscreen Foam, Wind Cap, Locking Device, Lanyard, Tie, Velcro Tape, Clip, Bag, Package etc. | No                        | Without warranty                              |

Godox After-sale Service Call 0755-29609320-8062