 
 


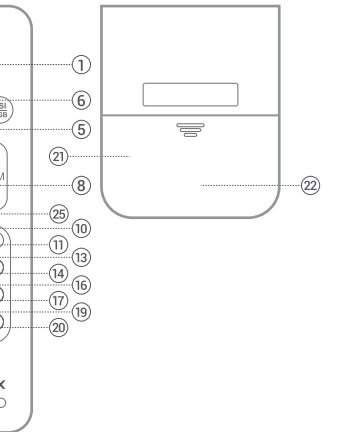

## 部件名称

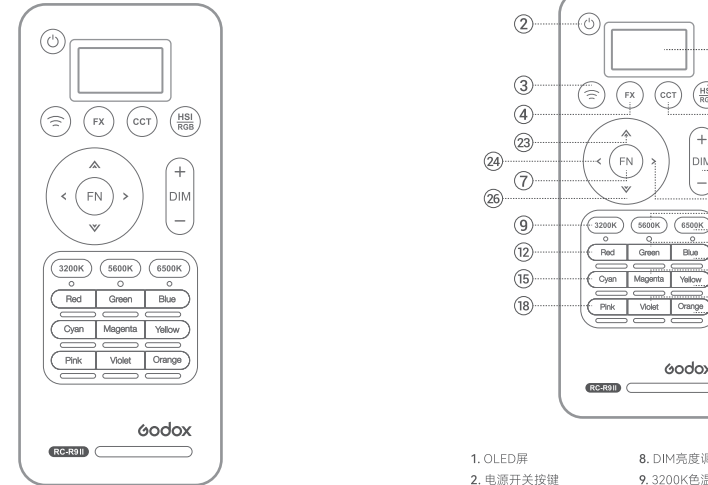

- 1. OLED屏
- 2. 电源开关按键
- 3. 无线设置按键
- 4. FX光效模式按键
- 5. CCT双色温模式按键
- 6. HSI/RGB彩光模式按键
- 7. FN按键
- 8. DIM亮度调节按键
- 9. 3200K色温按键
- 10. 5600K色温按键
- 11. 6500K色温按键
- 12. Red按键
- 13. Green按键
- 14. Blue按键
- 15. Cyan按键
- 16. Magenta按键
- 17. Yellow按键
- 18. Pink按键
- 19. Violet按键
- 20. Orange按键
- 21. 电池槽
- 22. 电池盖
- 23. 上键
- 24. 左键
- 25. 右键
- 26. 下键

**RC-R9II**  
遥控器  
Remote Control  
使用手册  
Instruction Manual

## 遥控器设置

短按电源开关按键实现开机/关机。

### 1. 遥控器频道/组别/ID调整

按无线设置 按键，进入频道/组别/ID设置界面。



**CH设置：**按上下键选中CH频道，按左键或右键选择频道，频道选择范围32个：1-32。



**GR设置：**按上下键选中GR频道，按左键或右键选择组别，组别选择范围16组(A B C D E F, 0-9)。



**ID设置：**按上下键选中ID，按左键或右键选择ID，ID选择范围：1-99。



## 4. 彩光模式

按HSI按键 进入彩光模式。

调节色相H：按上键或下键选择色相H，再按左右键调色相。色相调节范围0-360°。



调节饱和度S：按上键或下键选择饱和度S，再按左右键调节饱和度，饱和度调节范围0-100。



也可以直接选择遥控器上对应的彩色：Red、Green、Blue、Cyan、Magenta、Yellow、Pink、Violet、Orange。

## 5. 亮度调节

1. 当前单组灯亮度打开时，按DIM+“或”-“键调节亮度，亮度调节范围为：0-100%。



2. 打开/关闭单组亮度：按无线设置键进入无线设置界面，按上键或下键选中组别GR，按FN打开或关闭当前组别灯亮度。显示OFF为关闭状态，显示数字0-100为打开状态。



注：接收端在开机状态下才可以接收无线信号。

## 3. 双色温模式

按CCT按键 ，进入双色温模式，按上/下/左/右键调色温，色温调节范围：2500K-8500K，上下键以±1000调节色温，左右键以±100调节色温。也可直接短按 选择对应的色温：3200K、5600K、6500K。

序号	显示	场景	显示I	显示II	显示III
1		彩光循环	慢速	中速	快速
2		闪光灯	闪光	发布会	狗仔队
3		派对	生日会	KTV	迪斯科
4		雷闪电	间歇	频繁	持续
5		坏灯泡	间歇	频繁	持续
6		电视机	慢速	中速	快速
7		蜡烛	间歇	频繁	持续
8		火	柴火	篝火	火灾
9		烟花	短暂	连续	演出
10		警车	暴闪	频闪	快闪
11		消防车	暴闪	频闪	快闪
12		救护车	暴闪	频闪	快闪
13		音乐	音乐I	音乐II	
14		SOS			

序号	显示	场景	显示I	显示II	显示III
1		彩光循环	慢速	中速	快速
2		闪光灯	闪光	发布会	狗仔队
3		派对	生日会	KTV	迪斯科
4		雷闪电	间歇	频繁	持续
5		坏灯泡	间歇	频繁	持续
6		电视机	慢速	中速	快速
7		蜡烛	间歇	频繁	持续
8		火	柴火	篝火	火灾
9		烟花	短暂	连续	演出
10		警车	暴闪	频闪	快闪
11		消防车	暴闪	频闪	快闪
12		救护车	暴闪	频闪	快闪
13		音乐	音乐I	音乐II	
14		SOS			

序号	显示	场景	显示I	显示II	显示III
1		彩光循环	慢速	中速	快速
2		闪光灯	闪光	发布会	狗仔队
3		派对	生日会	KTV	迪斯科
4		雷闪电	间歇	频繁	持续
5		坏灯泡	间歇	频繁	持续
6		电视机	慢速	中速	快速
7		蜡烛	间歇	频繁	持续
8		火	柴火	篝火	火灾
9		烟花	短暂	连续	演出
10		警车	暴闪	频闪	快闪
11		消防车	暴闪	频闪	快闪
12		救护车	暴闪	频闪	快闪
13		音乐	音乐I	音乐II	
14		SOS			

序号	显示	场景	显示I	显示II	显示III
1		彩光循环	慢速	中速	快速
2		闪光灯	闪光	发布会	狗仔队
3		派对	生日会	KTV	迪斯科
4		雷闪电	间歇	频繁	持续
5		坏灯泡	间歇	频繁	持续
6		电视机	慢速	中速	快速
7		蜡烛	间歇	频繁	持续
8		火	柴火	篝火	火灾
9		烟花	短暂	连续	演出
10		警车	暴闪	频闪	快闪
11		消防车	暴闪	频闪	快闪
12		救护车	暴闪	频闪	快闪
13		音乐	音乐I	音乐II	
14		SOS			

序号	显示	场景	显示I	显示II	显示III
1		彩光循环	慢速	中速	快速
2		闪光灯	闪光	发布会	狗仔队
3		派对	生日会	KTV	迪斯科
4		雷闪电	间歇	频繁	持续
5		坏灯泡	间歇	频繁	持续
6		电视机	慢速	中速	快速
7		蜡烛	间歇	频繁	持续
8		火	柴火	篝火	火灾
9		烟花	短暂	连续	演出
10		警车	暴闪	频闪	快闪
11		消防车	暴闪	频闪	快闪
12		救护车	暴闪	频闪	快闪
13		音乐	音乐I	音乐II	
14		SOS			

序号	显示	场景	显示I	显示II	显示III
1		彩光循环	慢速	中速	快速
2		闪光灯	闪光	发布会	狗仔队
3		派对	生日会	KTV	迪斯科
4		雷闪电	间歇	频繁	持续
5		坏灯泡	间歇	频繁	持续
6		电视机	慢速	中速	快速
7		蜡烛	间歇	频繁	持续
8		火	柴火	篝火	火灾
9		烟花	短暂	连续	演出
10		警车	暴闪	频闪	快闪
11		消防车	暴闪	频闪	快闪
12		救护车	暴闪	频闪	快闪
13		音乐	音乐I	音乐II	
14		SOS			

## 规格参数

遥控器	RC-R9II
供电	3.0V(AAA*2)(不包括电池)
无线频率	2.4GHz
距离(空旷)	100米
频道	32个(1-32)
分组遥控	16组(A B C D E F, 0-9)
ID	99个(1-99)
工作环境温度	-10~40°C
产品尺寸	55x133x10mm
净重	63g

## 合格证

QC PASS

## 产品保修

深圳市神牛摄影器材有限公司

地址：深圳市宝安区福海街道塘尾社区耀川工业区厂房2栋  
电话：0755-29609320(8062) 传真：0755-25723423 邮箱：godox@godox.com

## GODOX Photo Equipment Co., Ltd.

Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

godox.com  
Made in China | 705-RCR920-00



## 产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条码
用户信息	姓名	联系电话
销售商信息	名称	联系电话
	通讯地址	通讯地址
	联系电话	销售日期
备注		

注：此表应由销售商盖章确认。

## 适用产品

本文件适用于相关《产品保修信息》(见后面说明)所列产品，其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

## 如何获得保修服务

您可直接与销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们可确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

## 不适用保修的情况

如产品存在下列情况，本文件项下的保证和服务将不适用：①产品或部件超过相应保修期；②错误或不当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有识别信息被修改变更或删除；⑤无有效保修卡；⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色、磨损和消耗，不是保修范围内的故障。


## 产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

产品类别	选项名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器等带电性能的部件。	12	客户送修
其他	如闪光灯管、造型灯泡、外壳、保护罩、锁紧装置、包装、电源线、同步线等。	无	无保修

神牛产品售后服务电话 0755-29609320-8062
 
## Names of Parts

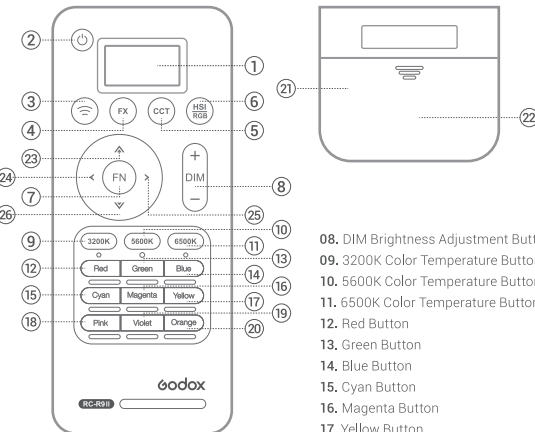


- 01. OLED Panel
- 02. Power Switch
- 03. Wireless Setting Button
- 04. FX Mode Button
- 05. CCT Bicolor Mode Button
- 06. HSI Colorful Light Mode Button
- 07. FN Button
- 08. DIM Brightness Adjustment Button
- 09. 3200K Color Temperature Button
- 10. 5600K Color Temperature Button
- 11. 6500K Color Temperature Button
- 12. Red Button
- 13. Green Button
- 14. Blue Button
- 15. Cyan Button
- 16. Magenta Button
- 17. Yellow Button
- 18. Pink Button
- 19. Violet Button
- 20. Orange Button
- 21. Battery Compartment
- 22. Battery Compartment Cover
- 23. Up Button
- 24. Left Button
- 25. Right Button
- 26. Down Button

## Remote Control Setting

 Short press the power switch button to power on or off the remote control.

### 1. Remote Control Channel/Group/ID Adjustment

Press wireless setting button (③) to enter channel/group/ID setting interface.



**CH Setting:** Press up and down button (⑦) to choose CH channel and press left or right button to choose channel value from 1 to 32.



**GR Setting:** Press up and down button to choose GR group and press left or right button to choose group value from A to F and 0 to 9.



**ID Setting:** Press up and down button to choose ID and press left or right button to choose ID value from 1 to 99.



## 2. FX Modes Setting

Press FX to enter FX modes and press left or right button to choose the categories of them. After choosing the kinds, there are I, II and III modes can be selected. There are 39 kinds of situational FX modes which are divided into 14 categories for your choice.

No.	Display	Situation	Display I	Display II	Display III
1		Colorfullights recycle	Slow speed	Medium speed	Quick speed
2		Flash	Flash	Press conference	Paparazzi
3		Party	Birthdayparty	KTV	Disco
4		Lightning	Discontinuous	Frequent	Sustainable
5		Brokenbulb	Discontinuous	Frequent	Sustainable
6		TV	Slowspeed	Medium speed	Quick speed
7		Candle	Discontinuous	Frequent	Sustainable
8		Fire	Firewood	Campfire	Firehazard
9		Firework	Brief	Continuous	Show
10		Policecar	Strongflash	Frequentflash	Quick flash
11		Firetruck	Strong flash	Frequent flash	Quick flash
12		Ambulance	Strong flash	Frequent flash	Quick flash
13		Music	Music I	Music II	
14		SOS			

### 3. Bicolor Modes

 
Press CCT button to enter bicolor modes and press up, down, left and right button to choose the color temperature from 2500K to 8500K. Press the up and down button will change the color temperature by  $\pm 1000$  per time while pressing the left and right button by  $\pm 100$  per time. You can also choose 3200K, 5600K and 6500K directly by pressing the corresponding buttons.



## 4. Colorful Light Mode Setting

Press HSI button to enter colorful light modes.

Adjust hue H: press the up or down button to choose hue H. Then, press the left or right button to adjust hue value from 0 to 360°.



Adjust saturation S: press the up or down button to choose saturation S. Then, press the left or right button to adjust saturation value from 0 to 100.



You can also choose Red, Green, Blue, Cyan, Magenta, Yellow, Pink, Violet and Orange color directly by pressing the corresponding buttons..

### 5. Light Brightness Adjustment:

1. When the current single light's brightness is displayed, press DIM " + " or " - " button to adjust the brightness from 0 to 100%.



2. Turn on/off the single group's brightness: press the wireless setting button to enter wireless setting interface. Press the up or down button to choose the group GR and press the FN button to turn on or off the single group's brightness. When the brightness is off, OFF will be displayed.

**Note:** Wireless signals can only be received when the receiving end is powered on.

## Technique Data

Remote Control	RC-R9II
Power Supply	3.0V(AAA*2)(battery not included)
2.4G Frequency Range	2413.0MHz-2464.5MHz
Max. Transmitting Power	5dbm
Distance(empty)	100m
Channel	32(1 to 32)
Grouping	16 Group(A B C D E F, 0 to 9)
ID	99 (1-99)
Working Environment Temperature	-10~40°C
Dimension	55x133x10mm
Net Weight	63g

### Warning

Operating frequency:2412.99MHz – 2464.49MHz  
Maximum EIRP Power: 4.28dBm

### Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

<b>Product Information</b>	Model	Product Code Number
<b>Customer Information</b>	Name	Contact Number
	Address	
<b>Seller Information</b>	Name	
	Contact Number	
	Address	
	Date of Sale	
<b>Note:</b>		

Note: This form shall be sealed by the seller.

### Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items,giveaways and additional accessories attached,etc.) are not included in this warranty scope.

### Warranty Period

The warranty period of products and accessories isimplemented according to the relevant Product MaintenanceInformation. The warranty period is calculated from the day(purchase date) when the product is bought for the first time,And the purchase date is considered as the date registered onthe warranty card when buying the product.

### How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that

the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

### Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. **The product or accessory has expired its warranty period;** ②. **Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc;** ③. **Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment;** ④. **The original identifying information of product or accessory is modified, alternated, or removed;** ⑤. **No valid warranty card;** ⑥. **Breakage or damage caused by using illegally authorized, nonstandard or non-public released software;** ⑦. **Breakage or damage caused by force majeure or accident;** ⑧. **Breakage or damage that could not be attributed to the product itself.** Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

### Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following **Product Maintenance Information:**

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g.battery charger, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, lockingdevice, package, power cord, sync cable, etc.	No	Without warranty