Godox



深圳市神牛摄影器材有限公司

地址:深圳市宝安区福海街道塘尾社区耀川工业区厂房2栋 电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add .: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com





GMC-F3

高亮监视器富士相机控制线

Ultra Bright Monitor Camera Control Cable for Fuji

使用手册

Instruction Manual

前言

感谢购买神牛产品!

此产品属于即插即用配件,适用于神牛高亮监视器系列产品在富士相 机的快捷控制使用。请仔细阅读本说明书,以便能正确的操作,发挥本 产品的优越性能。

主要特点

- 采用 TPE 固线接头, 可经受反复弯曲插拔;
- 采用喷砂工艺,不生锈,耐腐蚀;
- 多层安全保护,防刮耐磨抗氧化;
- 工艺精湛,持久耐用;严格测试,安全护航。

△警告

A 请勿私自拆卸产品!

△ 请保持干燥!

▲ 请勿放置在超过 50 度的高温环境中。

△ 请勿在易燃易爆环境中使用! 在这些场合下,请注意相关警告标识。 △ 请仔细阅读并遵守由厂商提供的警告或指示。

△ 如有技术更改,恕不另行通知。

产品结构图



连接监视器与相机



将监视器相机控制线的 2.5mm 四节插头对准监视器端接口插入, 再将另一端 2.5mm 三节插头与适配富士相机连接即可。

- 01 -

相机控制功能说明

- 将监视器与相机分别用 HDMI 线和监视器相机控制线连接。
- 在相机端打开遥控设置(某些相机无需设置),监视器端"相机控制" 设置"开"。
- 从监视器屏幕右侧向左滑动调出相机控制菜单,如正常连接、菜单 底色变亮,可操作各功能,否则为灰底。也可单击视频区域隐藏菜 单根据需要实时调出与隐藏。
- 4. 点击相机控制界面功能按钮实现对拍照,录制,对焦功能的控制。
- 注:1. 富士相机只支持拍照、开始 / 停止录制、触发自动对焦, 不支持其它更多功能的控制。
 - 控制线在富士相机上无法做到单一控制,在拍照模式下录制键也可以控制,录制模式下拍照键也可以控制。

附: GM6S/GM7S 相机控制功能介绍

相机控制主界面:



- 拍 照:点击控制相机拍照。
- 录制:点击控制相机开始录像或结束录像。
- 对 焦:点击触发相机自动对焦。
- 调 焦:点击进入手动调焦二级菜单,增加或减小焦距。
- 感光度:显示相机当前感光度,点击进入感光度二级菜单,增加或减少感光度。
- 光 圏: 显示相机当前光圏値,点击进入光圏调节二级菜单,増加或減少光圏。
- 快 门:显示相机当前快门值,点击进入快门调节二级菜单,增加或减少快门时间。
- 注:如监视器升级,按键功能变动,或更详尽指引,请参照 GM6S/GM7S 实时说明书。

- 03 -

- 04 -

兼容相机型号

功能	拍照	录制	对焦
机型			
X-E3#	√	√	√
X-T2#	√	√	√
X-T20	√	√	√
X-T3	√	√	√
X-T30	√	√	√
X-T4	√	√	√
X100V	√	√	√
X-T1*	√	×	√
X-Pro2*	√	×	√

功能	拍照	录制	对焦
机型			
X-Pro3*	√	×	√
X100T*	√	×	$\sqrt{}$
X-T10*	$\sqrt{}$	×	$\sqrt{}$

- # 因相机插孔设计原因, 相机控制线和 HDMI 线无法同时插入相机, 建议另买转接线。
- * 外接 HDMI 监视器时相机不能实时输出, 但控制线部分的功能可用。
- 提示: 兼容相机型号表会持续更新, 恕不另行通知, 如有需要请登录公司网站查看相机控制线最新支持列表。

- 06 -

- 05 -

Foreword

Thank you for purchasing!

This monitor camera control cable is a plug and play accessory cable for Godox ultra bright camera monitor series and Fuji cameras. With this cable, the monitor can realize the certain functions of camera control. Read this manual carefully before using to make sure the correct operation and exert the ootinum function.

Main Features

- TPE fixed wire connector, ensuring long using life span;
- Adopt sandblasting process, anti-rust and corrosion resistance;
- · Multiple-layer protected, scratch-proof and antioxidant;
- · Consummate craft, solid and durable;
- · Rigorous testing and security control.

- △ Don't disassemble!
- ▲ Always keep this product dry!
- ▲ Do not leave or store the product if the ambient temperature reads over 50°C.
 ▲ Do not leave the product in the presence of flammable gas. In
- certain circumstance, please pay attention to the relevant warning.

 A Please carefully read and observe the warning or direction offered
- by the manufacture.

 A Changes made to the specifications or designs may not be reflected in this manual.

Product Structure



Connection Guidance



Insert the 2.5mm four-stage plug of the monitor camera control cable into the interface of monitor, and the other 2.5mm three-stage end into compatible Fuji cameras,

Camera Control Operation Instruction

- Connect the monitor and camera with HDMI cable and monitor camera control cable respectively.
- Turn on the remote control setting on the camera (some models no need to set), and camera control setting on the monitor.
 Slide leftwards from the screen edge to bring out the camera
- control menu. The background color of the menu will lighten on if successfully connected, otherwise, it will be gray. Single-click the video area to hide the camera control menu.
- Click the following function buttons to use: shooting, recording and auto focus.

Notes: 1. This camera control cable can only control shooting, recording and auto focus functions of certain Fuji cameras.

This camera control cable supports dual control: recording is controllable when shooting, and shooting is also controllable when recording.

Camera Control Function Introduction of GM6S/GM7S

Camera control menu:

ISO:



- Shooting: Click to control the camera to shoot.
- Recording: Recording: Click to control the camera to record.
- Auto focus: Click to control the camera to automatically focus.
- Focusing: Click to enter the focal length adjustment secondary menu to increase or decrease the focal length manually.
 - Display the current photosensibility, click to enter the photosensibility adjustment secondary menu to increase or decrease the photosensibility manually.

- Aperture: Display the current aperture, click to enter the aperture adjustment secondary menu to increase or decrease the aperture manually.
- Shutter: Display the current shutter speed, click to enter the shutter speed adjustment secondary menu to increase or decrease the shutter speed manually.

-11 - - 12 -

Compatible Camera Models

Functions	Shooting	Recording	Auto focus
Models			
X-E3#	√	√	√
X-T2#	√	√	√
X-T20	√	√	√
X-T3	√	√	√
X-T30	√	√	√
X-T4	√	√	√
X100V	√	√	√
X-T1*	√	×	√
X-Pro2*	√	×	√

Functions	Shooting	Recording	Auto focus
X-Pro3*	√	×	√
X100T*	√	×	√
X-T10*	√	×	√

Tip: The compatibility list may continue to be updated without notice, please check the latest compatibility list on our official website, a conversion cable is suggested.

- 13 - - 14 -

[#] Due to the design of the camera, the camera control cable and HDMI cable can't be inserted into the camera jack port at the same time, a conversion cable is suggested.

Real time output is unavailable when connected to external HDMI monitor, but functions of control control cable are available.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help,

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU. They are allowed to be used in all EU member states.

For more information of DoC, Please click this web link: https://www.godox.com/DOC/Godox_GMC-F3_DOC.pdf

产品保修

尊敬的用户,本保修卡是申请保修服务的重要凭证,请您配合销售商填写并买盖保管 谢谢!

-J/1X-1/1-1, 60 6	1:	
产品信息	型 믁	产品条码
用户信息	姓名	联系电话
	通信地址	·
销售商信息	名称 联系电话 通信地址	
备注	销售日期	

注: 此表应由销售商盖章确认。

产品信息

本文件适用于相关《产品保修信息》(见后面说明)所列产品,其他非属 此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不 在此保修承诺内。

(足修)

本文件适用于相关《产品保修信息》(见后面说明)所列产品,其他非属 此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不 在此保修承诺内。

如何获得保修服务

要保修服务,您可直接与产品销售商或授权服务机构联系,也可拨打神 牛产品售后服务电话,与我们联系,由我们的服务人员为您安排服务。 申请保修时,您应提供有效的保修卡作为保修凭证,方可获得保修。如 您不能提供有效的保修卡,则在我们可确认产品或部件属于保修范围 的情况下,也可以为您提供保修,但这不作为我们的义务。

不适用保修的情况

如产品存在下列情况,本文件项下的保证和服务将不透用①产品或部件超过相应保修期;②错误或不适当使用,维护或保管导致放障或 损坏,如、不当懒选。非按产品合理预期和使用,不当插拨外接设备; 跌落或外力挤压;接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿 环境;③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成 的故障或损坏;④产品或部件原有识别信息被修改变更就除去;⑤无 有效保修卡;④使用非合法授权、非标准或非公开发行的软件造成的 故障或损坏;② 因不可抗力或意外事件造成的故障或损坏;⑤ 其他非 因产品本身层直回题导致的故障或损坏,追上述情况,彼应向相关责任 方寻求解决,种牛对此不承担任何责任、因非在保修期或保修范围内的 部件、附件或软件导致产品不能正常使用的,不是保修范围内的故障。 产品使用过程中正常的脱色,磨损和消耗,不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行:

产品类别	选件名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器等带电性能 的部件	12	客户送修
其他	如电源线、同步线、 电池盒、防风棉、防 风毛罩、锁紧装置、 手提绳、扎带、魔术 贴、领夹、便携袋、包 装等	无	无保修

神牛产品售后服务电话: 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safekeep it.

I nank you!			
Product Information	Model	Product Code Number	
Customer Information	Name	Contact Number	
	Address		
Seller Information	Name		
	Contact Number		
	Address		
	Date of Sale		
Note:	·		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases:(1). The product or accessory has expired its warranty period; (2). Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; (3). Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; (4). The original identifying information of product or accessory is modified, alternated, or removed; (5), No valid warranty card; (6), Breakage or damage caused by using illegally authorized, nonstandard or non-public released software;(7), Breakage or damage caused by force majeure or accident; (8), Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Product Main Body	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Charger, Electrical Parts etc.	12	Customer sends the product to designated site
Other Items	Power Cable, Sync Cable, Battery Case, Windscreen Foam, Wind Cap, Locking Device, Lanyard, Tie, Velcro Tape, Clip, Bag, Package etc.	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062