

**Legacy Hot Shoe Camera Flashes: V850III, TT600, TT600S, TT520II, TT560II, V850II, V850II Kit**

**Legacy Hot Shoe Retro Camera Flashes: Lux Junior, Lux Senior, Lux Cadet, Lux Elf**

**Legacy Hot Shoe Macro Flashes: ML-150II, MF-R76, ML-150**

**Legacy Hot Shoe Remote Control: XTR16, XTR16S, RT-16**

Note: 1. This table only lists the tested camera models, not all cameras. For the compatibility of other camera models, a self-test is recommended.

2. Rights to modify this table are retained.

Brand	Model	Flash Sync
Canon	5DIII	✓
	5DIV	✓
	70D	✓
	80D	✓
	1DX	✓
	850D	✓
	760D	✓
	50II	✓
	70II	✓
	40II	✓
	6D	✓
	800D	✓
	90D	✓
	600D	✓
	7D	✓
	3000D	Unavailable
	1500D	
	200DII	
	M5	✓
	M3	✓
	EOS RP	✓
	EOS R	✓
	R5	✓
R6II	✓	
R7	✓	
R50	✓	
60D	✓	

Note:

1. Camera R50 needs to collocate with an adapter.
2. Canon 1500D, 3000D and 200DII do not support Legacy hot shoe triggering.
3. Lux Elf is not compatible with R7/R6II/R8/R10 cameras.

Brand	Model	Flash Sync
Olympus	E-M1	✓
	PRN-F	✓
	E-M10II	✓
	E-M10III	✓
	E-PL8	✓
	E-P5	✓
	E-M5II	✓

Brand	Model	Flash Sync
Nikon	D800	✓
	D780	✓
	D5	✓
	D4	✓
	D500	✓
	D610	✓
	D750	✓
	D700	✓
	D300S	✓
	D3300	✓
	D3100	✓
	D5300	✓
	D5200	✓
	D5000	✓
	Z7II	✓
	Z6	✓
	Z8	✓
	ZFC	✓
	D200	✓
	D60	✓
D5100	✓	
D7500	✓	
D7100	✓	

Brand	Model	Flash Sync
Sony	A7III	✓
	A7IV	✓
	A7R5	✓
	A7RIII	✓
	A7RIV	✓
	A9	✓
	A7RIII/V4.0	✓
	A7R	✓
	A6400	✓
	RX10	✓
	A99	✓
	A77	✓
	A77II	✓
	A350	✓
	ZV-1	✓
	ZV-E10	✓
A9II	Unavailable	

Note:

1. DSLR cameras A99/A77/A350 need to collocate with adapters.
2. A9III does not support legacy hot shoe triggering.

Brand	Model	Flash Sync
FUJIFILM	X-Pro2	✓
	X-T20	✓
	X-T2	✓
	X-T1	✓
	GFX50s	✓
	GFX50R	✓
	X-T30	✓
	X-T4	✓
	X-T3	✓
	X-Pro1	✓
	X-T10	✓
	X-E1	✓
X-A3	Unavailable	
X100F	✓	
X100T	✓	
X-T5	✓	

Note:

1. Camera X100F do not support sync triggering at a shutter speed of 1/250 and 1/4000.
2. Camera X100T do not sync at a shutter speed over 1/60.
3. Camera X-A3 does not support legacy hot shoe triggering.

Brand	Model	Flash Sync
Panasonic	GH4	✓
	LX100	✓
	GF1	✓
	G85	✓
	GX85	✓
	FZ2500GX	✓
	S1R	✓
	GH5	✓
	G7	✓

Brand	Model	Flash Sync
Pentax	K-3II	✓
	645Z	✓
	KP	✓
	K-70	✓
	K-S2	✓
	K-1	✓
	K50	✓

Brand	Model	Flash Sync
Leica	SL1	✓
	M10	✓
	Q2	✓
	Typ201	✓
	LEICA-CL	✓
LEICA-SL2	✓	