



Cube-C RX

接收器

使用手册

感谢您购买神牛产品!

欢迎使用神牛无线麦克风接收器Cube-C RX。本产品体积小、即 插即用, 利用2.4GHz波段传输音频信号, 适用于直播、采访、短 视频、户外拍摄等多种场景。

使用本产品之前, 请仔细阅读说明书,以便正确操作及使用。

## 主要特点:

- · 全球通用频段2.4GHz 无线技术;
- 与发射器配对成功后、无线传输距离最大可达300米(视距)
- · 支持直连电脑UAC功能使用, 支持边充边用;
- · 支持单声道/立体声/安全音轨模式切换;
- 一键降噪,即插即用;
- · 适用于各类品牌相机/手机等设备使用。 注:发射器需另购。

- △ 本产品是精密设备、请勿使其掉落或受到撞击、以避免发生故
- △ 请勿私自拆卸、改装或尝试维修本产品。产品如出现故障须由 本公司或授权的维修人员进行检查维修。
- △ 请保持干燥,请勿用湿手握持本产品,亦不可将产品浸入水中 式暴露干雨中.
- △ 请勿将本产品存放在阳光直射的地方、加热装置附近或者炎 热、潮湿或多尘的地方。
- △ 请勿让儿童接触本产品,以避免发生意外。
- △ 请勿在易燃易爆环境中使用。在这些场合下,请注意相关警告 标识
- △ 请勿放置在超过50度的高温环境中。
- ▲ 请仔细阅读并遵守由厂商提供的警告或指示。



1. TX1指示灯 7. 背夹

2. 3.5mm音频输出接口

8. 模式 / 音量-键 3. 电源/配对/降噪按键 9. 安全音轨/音量+键

4. 外壳

10. 音量指示灯/安全音轨 指示灯/模式指示灯

5. TX2指示灯 6. USB-C接口 11 奈由触占

存在差异,请以实物为准。

# 物品清单









# 开/关机

长按接收器< ð >电源按键2s可实现开/关机。

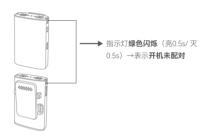


注: 若接收器开机后超过5分钟未配对成功,会自动关机。

短按两次接收器< ∞/₩ >配对按键进入配对状态, 连接成功退出 配对状态,未连接成功10s后退出配对状态。

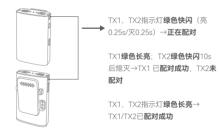

短按一次接收器< ∞/₩ >降噪按键开启/关闭降噪。

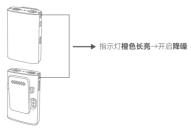

### 模式切换

本接收器拥有**单声道**和**立体声**两个模式,默认单声道模式。长按接 收器< M/- >模式 / 音量-键2s可切换为立体声模式,切回单声道 模式、同理。

本接收器拥有**安全音轨**功能,安全音轨开启状态默认单声道模式。 开启状态、右声道以-6dB增益记录音频。

长按接收器< **⑤/+** >安全音轨/音量+键2s开启**安全音轨**功能,再 长按接收器< §/+ >安全音轨/音量+键2s可关闭安全音轨功能。




注: 只有通过3.5mmTRS线连接相机时可以开启立体声/安全音轨模式。

### 输出音量调节

短按接收器< §/+ >安全音轨/音量+键或< M/- >模式/音量-键 调起音量调节状态,在3S内短按音量+键/音量-键可调节输出音量 档位, 共有3档, 首次开机默认中档。



通过USB-C充电线连接电源为产品充电。接收器TX1、TX2指示灯 可以提示接收器低电量、也可提示发射器低电量。

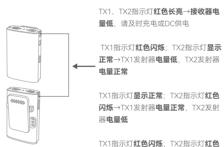


注: 发射器需另购

# 安装说明

# 1.安装在相机上

利用背夹,将接收器安装在相机上,通过3.5mm TRS转TRS音频线 连接接收器的3.5mm音频输出接口与相机的3.5mm音频输入接

闪烁→TX1发射器和TX2发射器电量低

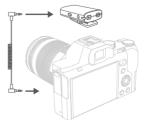

注: 3.5mm TRS转TRS音频线需另购。

#### 2.安装在手机上


#### 连接USB-C接口手机 (iPhone15以上或者安卓手机)

①通过USB-C转3.5mm TRS数据线GAC-IC9连接接收器的3.5mm 音频输出接口与手机的USB-C接口。



注:袖牛数据线GAC-IC9票另购。


②通过USB-C转USB-C数据线连接接收器的USB-C接口与手机的 USB-C接口。

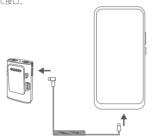

注: USB-C转USB-C数据线需另购。


### 连接Lightning接口手机(iPhone14及以下型号)

①通过Lightning转3.5mm TRS数据线GAC-IC10连接接收器的 3.5mm音频输出接口与手机的Lightning接口。

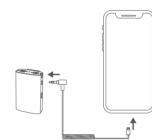

注: 神牛数据线GAC-IC10需另购。

②通过USB-C转Lightning数据线连接接收器的USB-C接口与手机 的Lightning接口。

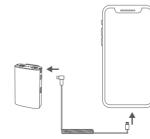

注: USB-C转Lightning数据线需另购。

# 规格参数

名称	接收器
<b>型</b> 号	Cube-C RX
传输类型	2.4GHz数字跳频系统
最大无线距离	300米 (视距)
输入参数	5V == 200mA
锂电池参数	3.8V, 200mAh, 0.76Wh
续航时间	约10个小时(不开降噪)
充电时间	约1个小时20分钟
工作环境温度	-10~50°C
RJ	46×29×18mm
净重	≈16g

规格参数如有变更,恕不另行通知。

# 维护保养

损害.

避免跌落: 如果受到强烈碰撞或振动, 设备可能会发生故障。 保持干燥: 本产品是非防水产品, 如果将其浸入水中或放置于高湿 度的环境中将可能发生故障。内部构造生锈可能会导致无法修理的

避免温度骤变: 温度的突变, 诸如在寒冷天进出温暖的大楼将可能 会使产品内部结露。为避免结露,请将本产品事先装入手提袋或塑 料包内, 以防温度突变。

远离强磁场: 无线电广播发射机等设备产生的强静电或强磁场可能 会干扰本产品正常工作。

如有技术更改, 恕不另行通知。

# 产品保修

尊敬的用户,本保修卡是申请保修服务的重要凭证,请您配合销售商 填写并妥善保管,谢谢!

央刊八文音体目, 砌砌:				
产品信息	<b>型</b> 号	产品条码		
	姓名	联系电话		
用户信息	通信地址			
	名称			
	-			
	联系电话			
销售商信息	通信地址			
	销售日期			
备注				

注: 此表应由销售商盖章确认。

本文件适用于相关《产品保修信息》(见后面说明)所列产品,其他非 屋此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件 等)不在此保修承诺内。

# 保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自 产品首次购买日起算,购买日以购买产品时保修卡登记日期为准。

### 如何获得保修服务

要保修服务 您可直接与产品销售商或授权服务机构联系 也可拨打 神牛产品售后服务电话,与我们联系,由我们的服务人员为您安排服 务。申请保修时、您应提供有效的保修卡作为保修凭证、方可获得保 修。如您不能提供有效的保修卡,则在我们可确认产品或部件属于保 修范围的情况下,也可以为您提供保修,但这不作为我们的义务。

# 不适用保修的情况

如产品存在下列情况。本文件项下的保证和服务将不适用 ① 产品 或部件超过相应保修期; ② 错误或不适当使用、维护或 保管导致的 故障或损坏,如:不当搬运;非按产品合理预期用途使用;不当插 拨外接设备; 跌落或外力挤压; 接触或暴露于不适当温度、溶剂、 酸碱、水浸或潮湿环境; ③ 由非神牛授权机构或人员安装、修理、更 改、添加或拆卸造成的故障或损坏: @ 产品或部件原有识别信息被 修改变更或除去;⑤ 无有效保修卡;⑥ 使用非合法授权、非标准或 非公开发行的软件造成的故障或损坏; ⑦ 因不可抗力或意外事件 造成的故障或损坏; ⑧ 其他非因产品本身质量问题导致的故障或 损坏。遇上述情况, 您应向相关责任方寻求解决, 神牛对此不承担任 何责任。因非在保修期或保修范围内的部件、附件或软件导致产品 不能正常使用的, 不是保修范围内的故障。产品使用过程中正常的 脱色,磨损和消耗,不是保修范围内的故障。

# 产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行:

产品类别	选件名称	保修 期(月)	保修服务 类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器等带电性能的部件	12	客户送修
其他	如电池盒、防风棉、防风毛罩、 锁紧装置、手提绳、扎带、 魔术贴、领夹、便携袋、 包装等	无	无保修

神牛产品售后服务电话 0755-29609320-8062







#### 深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区羅川工业区厂房2栋 电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.

# GODOX Photo Equipment Co., Ltd.

Add : Building 2 Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bag'an District Shenzhen 518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423







### Foreword

Thank you for purchasing!

Godox is proud to introduce the latest receiver of the wireless microphone system Cube-C RX. With the characteristics of compact and portable, plug and play, 2.4GHz wireless transmission, as well as compatibility with various smartphones and cameras, it's quite suitable for live streaming, interview, short video recording, outdoor shooting.

Please read this manual carefully before using to make sure the correct operation and exert the optimum function.

#### Main Feature

 
- Globally universal 2 4GHz wireless transmission technology.
- . The maximum wireless transmission distance up to 300m (sight distance) after paired with transmitter.
- Supports computer UAC function, also use and charge at the same
- · Switchable mono, stereo and safety modes.
- . One key noise reduction function, plug and play.
- Compatibile with various smartphones and cameras

Note: The transmitter is sold senarately

### Warning

- ⚠ This product is high-precision instrument, please avoid falling, collision or pounding.
- A Do not disassemble. Should repairs become necessary, this product must be sent to our Company or an authorized maintenance center.
- Always keep this product dry. Do not use in rain or damp conditions.
- △ Do not leave or store this product in the environment of direct sunlight, near heating devices, or in hot, humid or dusty.
- ▲ Keep out of reach of children.
- ▲ Do not use in flammable and explosive environments. Pay attention to the relevant warning signs.
- ⚠ Do not leave or store the product if the ambient temperature reads
- ⚠ Please read carefully and follow the warnings or instructions provided by the manufacturer.

#### Name of Parts



8. Mode/Volume - Button

9. Safety/ Volume + Button

11. Charging Points

10. Volume/ Safetv/Mode Indicator

- 1. TX1 Indicator
- 2. 3.5mm Audio Output Port
- 3. Power Switch/Pairing/ Denoise Button
- 4 Shell
- 5. TX2 Indicator 6. USB-C Port

Due to continuous updates and upgrades of the products, there may be differences between the actual products and the pictures. Therefore, the pictures are for reference only, products to prevail in kind.

# What's Inside






### USB-C Charging Cable ×1 Instruction Manual ×1

### Power Switch


Long press the power switch button < 9 > for 2s to turn on or off the

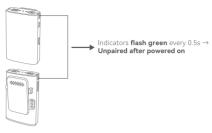

Note: The receiver will be turned off if it stays unpaired in 5min after powered on


### Pairing

Short press twice the pairing button < ∞/₩ > to pair it with the transmitter. It will exit pairing status once paired, while exit after 10s if

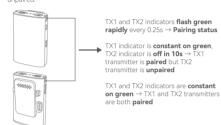

### Denoise

Short press the denoise button < co/ww > to turn on or off the denoise

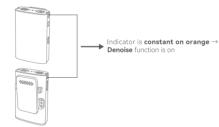

### Mode Switch

The sound track mode of receiver is mono by default, long press the mode/volume - button < M/- > for 2s can switch to stereo track mode, long press again can switch back to mono track mode. The safety mode is also available, which can be turned on in mono track by default, and the right channel will record the audio with -6dB

Long press the safety/volume + button < \$/+ > for 2s can turn on or off the safety mode.



Note: The stereo and safety modes are only available when connecting the receiver with a camera by 3.5mm TRS cable.

# **Output Volume Adjustment**

 
Short press the safety/volume + button < \$/+ > or mode/volume button < M/- > to enter volume adjustment status, then short press the volume + button or volume - button in 3s can adjust the output volume in 3 levels. The volume is the middle level by default after first. boot



\_ One indicator is on → Lowest volume level Two indicators are on → Medium volume level Three indicators are on → Highest volume level

# Charging

The receiver can be charged after connecting to power source through the USB-C charging cable. TX1 and TX2 indicators of receiver can show the battery levels of both the transmitters and receivers.



TX1 and TX2 indicators are constant on red → Battery level of receiver is low please charge it or switch to DC power TX1 indicator flashes red, TX2 indicator

TX1 indicator displays normally, TX2 indicator flashes red → Battery level of TX1 transmitter is normal, while battery level of TX2 transmitter is low

displays normally → Battery level of

TX1 transmitter is low, while battery

level of TX2 transmitter is normal

Both TX1 and TX2 indicators flash red → Battery levels of TX1 and TX2 transmitters are low

Note: the transmitter is sold separately

# Instructions for Connection

### 1. Instal onto Cameras

Clip the receiver to the camera with its back clip, then connect the 3.5mm audio output port of receiver to the 3.5mm audio input port of camera with the 35mm TRS-TRS audio cable




Note: the 3.5mm TRS-TRS audio cable is sold separately.

#### 2. Install onto Smartphones Smartphones with USB-C port (iPhone15 and thereafter or Androids)

① Connect the 3.5mm audio output port of receiver to the USB-C port of smartphone with the USB type-C to 3.5mm TRS adapter cable GAC-IC9.




2 Connect the USB-C port of receiver to the USB-C port of smartphone with the USB-C to USB-C data cable.

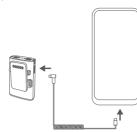

Note: the USB-C to USB-C data cable is sold separately


#### Smartphones with Lightning port (iPhone14 and therebefore)

(1) Connect the 3.5mm audio output port of receiver to the Lightning port of smartphone with the Lightning to 3.5mm TRS adapter cable GAC-IC10.

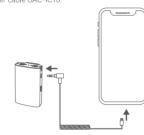

Note: GAC-IC10 is sold separately.

2 Connect the USB-C port of receiver to the Lightning port of smartphone with the USB-C to Lightning data cable.

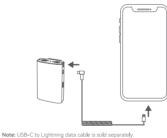

# **Technical Data**

Receiver	
Cube-C RX	
2.4GHz Frequency Hopping System	
300m (sight distance)	
5V == 200mA	
3.8V, 200mAh, 0.76Wh	
Approx. 10h (denoise off)	
Approx. 1h20min	
-10~50°C	
1.81 "×1.14 "×0.71 "	
≈16g	

Specifications and data may subject to changes without notice.

### Maintenance

Avoid falling. Strong collision or vibration may malfunction the device. Keep dry. This product is not water-proof. Malfunction, rust, and corrosion may occur and go beyond repair if soaked in water or exposed to high humidity

Avoid sudden temperature changes. Condensation happens in sudden temperature changes such as the circumstance when taking the product out of a building with higher temperature to outside in winter. Please put the product in a handbag or plastic bag beforehand. Keep away from strong magnetic field. The strong static or magnetic field produced by devices such as radio transmitters leads to malfunction.

Specifications and data may subject to changes without notice.

# Warning

Operating frequency:2402MHz - 2480MHz Maximum EIRP Power: 5dBm

# **Declaration of Conformity**

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/FU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link: https://www.godox.com/eu-declaration-of-conformity.

The device complies with RF specifications when the device used at 0mm from your body.

### **FCC Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### Warrantv

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number	
	Name	Contact Number	
Customer Information	Address		
	Name		
	Contact Number		
Seller Information	Address		
	Date of Sale		
Note			

Note: This form shall be sealed by the seller

# Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

#### Warranty Period

The warranty period of products and accessories isimplemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time and the purchase date is considered as the date registered onthe warranty card when buying the product.

#### How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

# Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: 1. The product or accessory has expired its warranty period; ②. Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing. improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; 3. Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance. alternation, addition and detachment; (4). The original identifying information of product or accessory is modified, alternated, or removed; ⑤. No valid warranty card; ⑥. Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦. Breakage or damage caused by force majeure or accident; (8). Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

#### Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

roduct ype	Name	Maintenance Period(month)	Warranty Service Type
arts	Product Main Body	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Charger, Electrical Parts etc.	12	Customer sends the product to designated site
ther ems	Battery Case, Windscreen Foam, Wind Cap, Locking Device, Lanyard, Tie, Velcro Tape, Clip, Bag, Package etc.	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062