


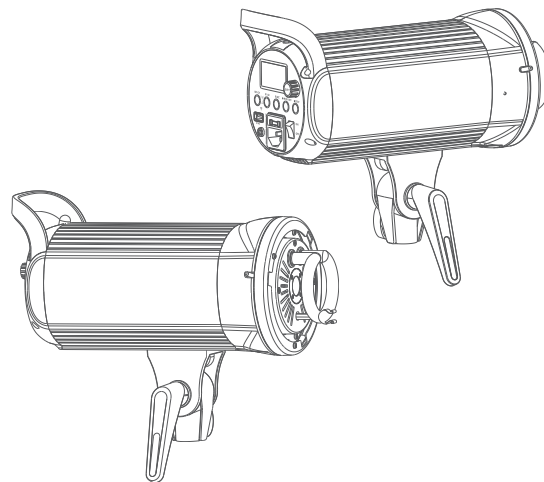

# Godox



Wechat  
Official Account  
神牛微信公众号

### 深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区耀川工业区厂房2栋

电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

### GODOX Photo Equipment Co., Ltd.

Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen 518103, China

Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

[www.godox.com](http://www.godox.com)

Made in China | 705-SK2V00-00



# SK300II ✓ SK400II ✓

影室闪光灯  
Compact Studio Flash

使用手册  
Instruction Manual

## 重要安全提示

本产品属于专业摄影设备，需要专业人员操作使用。使用时必须遵守以下基本安全预防措施：使用前必须拆除产品上的所有运输保护材料和包装。

1. 使用本产品前，请仔细阅读并完全理解产品说明书，严格按照说明书中的安全提示操作。否则，可能导致死亡、严重伤害、产品损坏或其他财产损失的安全隐患。
2. 闪光灯工作时存在高电压，关机后设备内部电容仍将持续带电一段时间。
3. 本产品为专业灯具，儿童禁止使用。儿童接近时，成人必须密切监督，防止儿童碰撞灯具或私自使用灯具，造成人身伤害。
4. 本灯具并非普通灯具，不可用于普通照明，任何有过眼部损伤或眼部敏感的人群均应避免使用本灯具或直视本灯具。
5. 使用时必须小心，严禁接触如闪光灯管等高温部件，以避免烫伤。
6. 任何情况下均禁止将闪光灯直接对准人眼（特别是婴儿眼睛），否则短时间内可能导致视力损伤。如感到眼睛不适，应立即关闭灯具，停止使用并及时就医。
7. 闪光灯损坏时，应立即停止使用，及时联系制造商、服务代理商或合格维修人员更换，以防发生事故。
8. 严禁使用损坏的设备或配件，必须等待专业维修人员检查维修并确认设备正常后，才可继续使用。
9. 更换灯管、保护玻璃或保险丝前，必须断开电源或拆下电池（如装有电池），确保灯具与电源完全断开。更换灯管前让其冷却 10 分钟，操作时需戴绝缘 / 或隔热手套。
10. 拔插头时务必关闭产品电源，插入插头时务必检查是否完全卡入。
11. 使用过程中，如果产品因跌落、挤压或强力冲击导致外壳破裂，应立即停止使用，避免接触内部电子部件而触电受伤。
12. 部分产品电源线较长，请合理放置，避免接触热源或绊倒他人。建议使用原装电源线。非原装线造成的损坏不在保修范围内。
13. 进行清洁和维修前，请先从电源插座上拔出设备电源插头。不要拉扯电源线强行拔出，正确方法是用双手抓住插头端头拔出。
14. 本设备不防水，请保持干燥，不能浸入水或其他液体；应安装在通风干燥位置，避免在雨天、潮湿、多尘或过热环境中使用。不要在设备上方放置物品，或让液体流入内部，防止发生危险。
15. 未经授权，请不要自行拆卸本产品。产品若出现故障，必须由本公司或授权维修人员检查和维修。
16. 存放设备前，请确保设备已完全冷却，拔下电源线，放入设备包内或通风干燥位置。
17. 请勿将设备放置在酒精、汽油等易挥发性溶剂或气体如甲烷、乙烷等附近。
18. 本设备禁止在有爆炸危险的环境中使用或存放。
19. 运行期间和之后，设备灯头与用户和其他人员，以及热敏或可燃物品之间，距离必须始终保持至少 1 米。
20. 严禁覆盖设备散热口！

21. 请勿使用未经本公司认可的配件，以免造成火灾、触电或人身伤害。
22. 清洁设备时，请用干燥软布轻轻擦拭，不可使用湿布，否则可能会损坏设备。
23. 本使用说明基于严格测试制定，设计和规格变更恕不另行通知。您可登录我们官方网站查看最新电子版使用说明，了解产品最新资讯。
24. 部分产品内置锂电池，必须使用专用充电器充电，并按正确操作说明，在规定电压和温度范围内使用。
25. 产品使用锂电池供电，这类锂离子电池使用寿命有限，会逐渐失去储能能力，这种能力下降不可逆。电池老化时，产品续航时间会减少。锂离子电池使用寿命预计 2—3 年。请定期检查电池情况，如果充电时间明显增加或续航时间明显减少，请考虑更换新电池。
26. 部分产品配备锂电池，其储存建议如下：储存前，将电池充放电至约 50% 电量；至少每 6 个月充电一次，至约 50% 电量；可拆卸电池应单独存放；储存温度在 0°C 至 40°C 范围内。
27. 产品使用锂电池供电，请注意以下事项：
  - 不要拆卸、压碎或刺穿电池；
  - 避免使电池触点短路；
  - 不要在火中或水中处理电池；
  - 不要将电池暴露在 60°C 以上高温下；
  - 将电池放在儿童接触不到的位置；
  - 防止电池遭受过度冲击或振动；
  - 不要使用已损坏的电池；
  - 如果电池出现泄漏，请避免接触泄漏液体；
  - 如果眼睛接触电池液体，立即用水冲洗至少 15 分钟，抬起眼睑直到没有液体的迹象后及时就医。
28. 处理任何电池前，请确认并遵守当地相关法律法规。
29. 本设备整机的保修期为一年。消耗品（如电池）、适配器、电源线等配件不在保修范围内。
30. 私自维修将取消保修资格，需支付维修费用。
31. 不当操作导致故障不在保修范围。

## 前言

感谢您购买SKII-V系列影室闪光灯!

此产品持久耐用,功能齐全,性能强大,专为中小型影楼和摄影工作室人像拍摄、电商产品拍摄设计,是一款高性价比的理想光源。在大型影棚中也可以作为补光工具提供高光、背景光、发型光。产品有以下亮点:

- 内置神牛2.4G无线X系统
- 40级闪光强度随意选择, LCD显示屏从1/16-1/1(或6.0-10.0)准确定位输出功率
- 选配X1、XT16或者FT-16功率遥控器,可远程控制闪光灯功率大小、造型灯开关、蜂鸣器功能及引闪
- 精致轻巧,保菜卡口,兼容各类影室光效附件
- 10W造型灯,5%-100%手动调光
- 输出稳定,同一功率连续输出变化不超过2%
- 具备防预闪功能,带一次预闪功能的相机用光控可实现同步拍摄
- 人机工程学面板,3秒后调节参数智能记忆、开机自动恢复

## 目录

01	前言	05	· TEST试闪按键
02	警告	05	· 同步触发
02	注意事项	05	· <GR/CH>频道/组别按键
03	部件	06	· 光控使用
03	· 机身	06	· 声音提示
03	· LCD显示屏	06	· 组合键
03	· 附件	06	· 报警显示
03	· 可选购附件	06	· 记忆存储功能
04	使用	06	· 无线控制功能
04	· 固定闪光灯	07	· 装卸闪光灯管
05	· 接通电源	08	产品参数
05	· 造型灯使用	08	维护保养
05	· 功率调节		

## 警告

在使用本设备前请仔细阅读以下警告内容,并妥善保管以便所有本产品使用者可随时参阅。


- ⚠ 请勿私自拆卸产品,如产品出现故障须由本公司或授权的维修人员进行检查维修。
- ⚠ 请保持干燥:请勿用湿手接触产品,亦不可将产品浸入水中或暴露于雨中。
- ⚠ 请勿让儿童接触本产品。
- ⚠ 摄影灯适用于通风的环境,使用时请保持灯光源部分及散热孔不被堵塞,请勿在易燃易爆的环境中使用。
- ⚠ 摄影灯采用电源插头做为断接装置,应保持随时便于操作。
- ⚠ 使用时严禁用手接触灯光发热部件。
- ⚠ 安装及连接附件时,请关闭开关断开电源,装卸闪光灯管/造型灯时,请确认灯管为冷却状态,避免烫伤,还需佩戴绝缘手套。
- ⚠ 请勿将闪光灯头正对人眼闪光(特别是婴儿的眼睛),否则可能会在短时间造成视力障碍。在不使用时,请断开电源。
- ⚠ 使用本产品前请先取下灯头保护罩。

## 注意事项

- ⚠ 闪光灯在全功率的情况下连续引闪30次后,需冷却3分钟左右。如果连续使用而不冷却就会产生高温积热。
- ⚠ 不可长时间连续使用造型灯,否则可能造成安装在灯头上的柔光箱等易燃附件燃烧。有易燃附件时建议不要连续使用造型灯超过10分钟。如使用超过10分钟,请冷却1分钟后继续使用。
- ⚠ 使用束光筒时,请勿长时间点亮造型灯或过频闪光(全功率每分钟不多于6次)。积热会导致闪光灯外壳受损或造成灯的损坏。
- ⚠ 避免突然的碰撞,防止闪光灯管或造型灯受损。

## 部件

机身

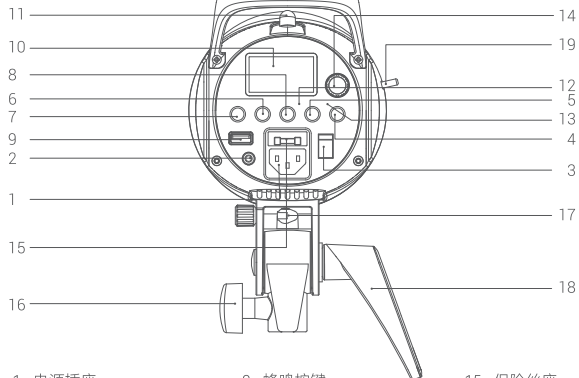

- |                   |             |            |
|-------------------|-------------|------------|
| 1. 电源插座           | 8. 蜂鸣按键     | 15. 保险丝座   |
| 2. 同步线插孔          | 9. 外置无线控制插座 | 16. 托架     |
| 3. 电源开关键          | 10. LCD显示屏  | 17. 伞孔     |
| 4. <TEST>试闪按键     | 11. 光控接收器   | 18. 方向调节把手 |
| 5. <MOD/OFF>造型灯按键 | 12. 造型灯指示灯  | 19. 卡口推制   |
| 6. <S1/S2>光控模式按键  | 13. 试闪指示灯   |            |
| 7. GR/CH频道/组别按键   | 14. SET旋钮   |            |


- |               |               |                     |
|---------------|---------------|---------------------|
| 1. 2.4G内置无线符号 | 6. 温度报警显示     | 11. 造型灯在百分比显示功率模式   |
| 2. 内置无线频道     | 7. 内置无线组别     | 12. 造型灯在闪光灯引闪的时候自动灭 |
| 3. 内置无线频道拨码盘  | 8. 闪光灯功率显示    |                     |
| 4. 光控显示       | 9. 造型灯关       |                     |
| 5. 声音显示       | 10. 造型灯PROP模式 |                     |

## 附件

 
1. 电源线
2. 灯头保护罩
3. 说明书



可搭配本公司以下摄影附件使用，以获得最佳的拍摄效果和使用体验：X1、X2、XPRO、XT16或FT-16功率遥控器、柔光箱、反光伞、蜂巢、雷达罩、束光筒等。




## LCD显示屏

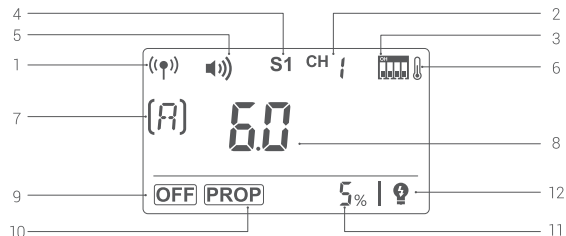

## 使用

固定闪光灯

1. 将闪光灯设备安装在一个合适的灯架上，调整好托架并扭紧固定，根据需要使用把手来调节灯的方向。伞孔可以插上各类影楼伞。

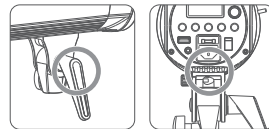

## 接通电源

通过电源线接通交流电源与闪光灯，拨动闪光灯上的电源开关键，实现开机或者关机。

## 造型灯使用

短按<MOD/OFF>造型灯按键依次循环切换OFF、PROP、百分比。

1.当屏幕显示<OFF>时，表示当前造型灯处于关闭状态。

2.当屏幕显示<PROP>时，表示当前造型灯处于自动状态，会随着闪光灯变化而变化，会随着功率增加而变亮。

3.当屏幕显示百分比时，表示当前造型灯处于可调节亮度状态，调节范围为5%-100%，短按SET旋钮进入调节界面，旋转SET按钮调节所需的造型灯亮度值，最后短按SET按钮退出造型灯亮度设置。

造型灯开启时，长按2秒<MOD/OFF>造型灯按键，屏幕显示<🔒>，开启造型灯在引闪时自动灭的功能，再次长按<MOD/OFF>造型灯按键可关闭造型灯在引闪时自动灭的功能。

安全设置：造型灯点亮4小时后会自动关闭，以防无人状态下长时间点亮导致高温积热。



如有易燃附件安装在灯头上，不可长时间点亮造型灯，建议点亮10分钟后冷却1分钟再继续使用，并注意易燃附件温度。

## 功率调节

闪光功率通过旋转SET旋钮来控制，可以从“1/16”至“1/1”自由调节，LCD显示屏将对所选择功率作准确显示，满足客户在不同环境下对光源的要求。LCD显示屏显示“--”时，表示闪光引闪功能关闭。从高档调节至低档，需要按下TEST试闪按键来放电以获得所需的功率。

## TEST试闪按键

欲使闪光灯测试闪光而不拍照，请按TEST试闪按键。摄影师可以通过TEST试闪按键结合SET旋钮来调节闪光亮度。

小提示：长按SET旋钮的同时开机，可查看闪光灯的版本号。

## 同步触发

同步线插孔(2)规格为Φ3.5mm，此处插入同步线或者触发器触发插头对闪光灯进行同步引闪。

## <GR/CH>频道/组别按键

短按<GR/CH>频道/组别按键可以调节内置无线组别，LCD组别显示在闪烁时，旋转SET旋钮可以更改组别；长按可以选择内置无线频道，LCD频道显示在闪烁时，旋转SET旋钮可以更改频道。

## 光控使用

光控模式有3种选择,短按<S1/S2>光控模式按键可依次循环切换。

• 非光控模式：LCD没有显示S1或S2，表示光控功能已关闭。

S1光控单元设置：按光控模式键选择S1功能，闪光灯可作为副灯使用，创造多种照明效果，适用于手动闪光环境。它会与主闪光灯的第一次闪光同步触发闪光，效果与使用无线引闪器一致。

• S2光控单元设置：按<S1/S2>光控模式键选择S2功能，闪光灯可作为副灯使用，适用于TTL闪光环境。具有防预闪功能，使用带一次预闪功能的相机能用光控实现同步拍摄。它会与主闪光灯的第二次闪光同步触发闪光，即2次光控引闪。

## 声音提示

蜂鸣按键控制蜂鸣提示的打开和关闭。短按蜂鸣按键，当LCD显示声音符时，表示蜂鸣提示音打开；短按蜂鸣按键，当LCD没有显示声音符时，表示蜂鸣提示音关闭。

每次回电充满时会响“BI—”一声，提示可以引闪。

## 组合键

<GR/CH>频道/组别按键和<S1/S2>光控模式按键同时长按可以开/关内置无线，LCD没有显示无线符号表示内置无线关闭，显示无线符号则表示内置无线开启。同时按住<S1/S2>光控模式按键和蜂鸣按键，可恢复出厂设置。

## 报警显示

显示	警示内容
E0	没有连接温度传感器
E1	充电中，1秒内检测电容电压没有上升
E2	升温最快的元器件超过额定温度
E3	放电电容电压>额定值+10%

报警声音，BIBI 0.5s响一次，单击SET旋钮可停止报警鸣叫。

## 记忆存储功能


闪光灯设有参数记忆功能，调节参数3秒后未变更的，闪光灯会自动存储设置好的参数。下次开机使用时初始设置跟关机前一致。

## 无线控制功能

闪光灯内置2.4G无线传输，可以配合X1、XT16功率遥控器使用。

同时按下<GR/CH>频道/组别按键和<S1/S2>光控模式按键开启内置无线，令屏幕显示<🔒>，此时表示进入内置2.4G无线状态。如果在拍摄现场不止一个无线闪光系统，您可以通过更改通讯频道来防止信号干扰。保证主控单元和从属单元设置为相同的频道编号即可。

 
## 设置通讯频道



1 长按<GR/CH>频道/组别按键2秒,频道编号闪烁显示。




 2 旋转调SET旋钮从1至32、中选择频道。




3 按下SET旋钮,确定。


## 设置通讯组别

 

1 短按<GR/CH>频道/组别按键,组别编号闪烁显示。

 

2 旋转SET旋钮从0至F中选择组别。

 

3 按下SET旋钮,确定。

## 外置无线控制功能


闪光灯内置无线控制插座,配合特定遥控器使用,您可以实现对闪光灯的无线控制。将FT系列遥控器的接收端插入无线控制插座,手持遥控器发射端,即可远程控制闪光灯的功率开关和大小、闪光灯触发等。您也可以将发射端置于相机热靴上,通过相机快门来进行同步引闪。

更多遥控器的使用方法,请查阅FT系列遥控器的说明书。



## 装卸闪光灯管

关闭所有电源并拔下电源线,带上绝缘手套,将闪光灯管上的铁丝拧松,用平衡力拿住灯管两脚间,轻轻往外拉出卸下旧灯管。将旧灯管两脚上的套管取下套到新灯管两脚,拿住新灯管两脚间,对准灯头上两铜柱,用力往里推进。最后将铁丝绕灯管弹片并拧紧固定好灯管。

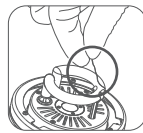

## 产品参数

型号	SK300IIV	SK400IIV
闪光能量	300Ws	400Ws
闪光指数(m ISO 100)	58	65
色温	5700±200k	
电源电压	AC100V~120V~50/60Hz或AC200V~240V~50/60Hz	
闪光功率调控	OFF, 6.0~10.0(1/16~1/1)	
造型灯功率	10W	
造型灯档位	5%~100%	
回电时间	0.1~1.5秒	
闪光触发控制方式	同步线插孔,光控感应,试闪按钮,无线控制插座	
闪光持续时间	1/2000~1/800s	
同步端口输出参数	5V	
USB端口输出参数	5V/200mA (仅限神牛接收器)	
保险丝	AC200V~240V~50Hz: 5A AC100V~120V~60Hz: 8A	
尺寸	灯体直径Φ13.7cm 含把手高20.6cm 含保护罩长35cm	灯体直径Φ13.7cm 含把手高23.2cm 含保护罩长39cm
净重	约2kg	约2.1kg

## 维护保养

- 闪光灯在工作时,如发现异常,应立即关掉电源,查明原因。
- 灯体应避免震动,平时注意表面除尘。
- 灯体稍有发热为正常现象,无特别需要时,勿连续引闪。
- 除灯管与造型灯消耗品允许用户用原厂配置的自行装卸更换外,闪光灯的其他维护概
- 由本厂指定可供原厂配件之维修部负责。
- 1年保修,由于灯管与造型灯为消耗品,不在1年保修范围。
- 擅自检修此闪光灯,经发现将取消闪光灯之一年保修期,维修需要收取相关费用。
- 如果本品出现故障或者被水淋湿,唯有在专业人员维修后方可继续使用。
- 在维修和清洁本品时请断开电源。
- 如有技术更改,恕不另行通知。

## Important Safety Instructions

**This product is a professional photographic equipment, to be operated by professional personnel only. The following basic safety precautions must be followed when using this product: All transport protective materials and packaging on the product must be removed before use.**

- Carefully read and fully understand the instruction manual before use and strictly follow the safety instructions. Failure to do so may result in death, serious injury, damage to the product, or other property damage.
- High voltage exists when the flash is powered on. Internal capacitors will remain charged for some time after power off.
- This product is a professional lighting fixture, children are prohibited from using it. Children must be closely supervised by adults when approaching the fixture, to prevent collisions with the fixture or unauthorized use that could cause personal injury.
- This is not an ordinary lighting fixture and must not be used for general illumination. Anyone with a history of eye damage or sensitivity should avoid using this fixture or looking directly at it.
- Extreme caution must be exercised when using it, do not touch high-temperature parts such as flash tubes to avoid burns.
- Do not point the flash directly at the eyes (especially baby's eyes) under any circumstances, as this could impair vision in a short time. Turn off immediately if discomfort occurs, stop using, and seek medical attention promptly.
- If the flash tube is damaged, stop using it immediately and contact the manufacturer, service agent, or qualified repair personnel for a replacement to prevent accidents.
- Do not use damaged equipment or accessories. Allow professional repair technicians to inspect and confirm normal operation before continuing use after repairs.
- Disconnect power source or remove batteries (if it has one) before replacing flash tube, protective glass, or fuses. Allowing 10 minutes to cool before replacing flash tube, and wear insulated or heat resistant gloves when operating.
- Turn off power before connecting or disconnecting plugs from outlets. Ensure plugs are fully inserted when connecting.
- Stop using immediately if the product shell is cracked due to falling, squeezing, or strong impact, to avoid touching the internal electronic components and getting an electric shock.
- Some products have long power cords, please place them properly to avoid contact with heat sources or tripping others. It is recommended to use the original power cord. Damage caused by non-original cords is not covered by the warranty.
- Unplug the equipment power plug from the power socket before cleaning or maintenance. Do not pull the power cord forcibly, use both hands to hold the plug end and pull it out.
- This device is not waterproof. Keep it dry and avoid immersing it in water or other liquids. It should be installed in a ventilated and dry location and avoid using in rainy, humid, dusty, or overheated environments. Do not place items above the device or allow liquids to flow into it to prevent danger.
- Do not disassemble without authorization. If the product malfunctions, it must be inspected and repaired by our company or authorized repair personnel.
- Before storing the device, ensure it has completely cooled down and the power cord is unplugged, then put it in the protective case or a ventilated dry location.
- Do not place the device near alcohol, gasoline, or other flammable volatile solvents or gases such as methane and ethane.
- Do not use or store this device in potentially explosive environments.
- Maintain at least 1 meter distance between the lamp head and the user, other people, and heat-sensitive or flammable items during and after use.
- Do not cover the heat dissipation port!
- Do not use accessories not been approved by our company, as this may cause fire, electric shock or personal injury.
- Clean gently with a dry cloth. Do not use a wet cloth as it may damage the device.
- This instruction manual is based on rigorous testing. Changes in design and specifications are subject to change without notice. Check official website for latest instruction manual and product updates.
- Use only specified charger and follow proper usage instructions for certain products with built-in lithium batteries, within the rated voltage and temperature range.
- Some products are powered by lithium batteries, who have limited lifespans and will gradually lose their charging capacities, which is irreversible. As the battery ages, the product's battery life will decrease. The lifespan of lithium battery is estimated to be 2 to 3 years. Please regularly check the battery, and if the charging time significantly increases or the battery life significantly decreases, consider replacing the battery.
- Some products are equipped with lithium batteries. The following are the storage recommendations: Charge the battery to about 50% before storage. Charge it to about 50% at least every six months. Removable batteries should be stored separately. The storage temperature should be between 0°C and 40°C.
- For products powered by lithium batteries. Please note:
  - Do not disassemble, crush, or puncture the battery;
  - Avoid short-circuiting the battery contacts;
  - Do not expose the battery to fire or water;

- Do not expose the battery to temperatures above 60°C;
  - Keep out of reach of children;
  - Protect the battery from excessive shock or vibration;
  - Do not use a damaged battery;
  - If the battery leaks, avoid contact with the leaking fluid;
  - If the battery fluid comes into contact with your eyes, immediately rinse with water for at least 15 minutes. Lift your eyelids until there are no signs of fluid and seek medical attention promptly.
28. Confirm and comply with all relevant local laws and regulations when handling any batteries.
29. The warranty period for this device as a whole is one year. Consumables (such as batteries), adapters, power cords, and other accessories are not covered by the warranty.
30. Unauthorized repairs will void the warranty and will incur charges.
31. Failures from improper operation is not covered under warranty.

## FOREWORD

Thanks for choosing compact studio flash SK300II-V and SK400II-V. It is a lightweight, compact and durable flash with complete functions. Design for shooting studio portrait and e-commerce product. This product is suitable for head shot, waist shoot, and certificate photography, as well as product shooting, etc. It can also offer high light, background light, or hair light in large studios and workshops. The SKII flash offers:

- Built-in Godox 2.4G wireless X system
- Precise output displayed on LCD panel, 40 steps from 1/16 to 1/1 (or 6.0 to 10.0)  
Use optional X1, XT16 or FT-16 trigger to control the flash power ratio, modeling lamp and buzzer, as well as flash triggering
- Compact and lightweight body with Bowens mount to add almost any studio light shapers
- 10W modeling lamp adjusts in 5% to 100% power levels
- Outstanding output stability, no more than 2% shifts when under the same output
- Anti-preflash function enables synchronization with cameras that have a one-preflash firing system
- Auto memory and recovery of adjusted panel settings


















## CONTENTS

<b>12 Foreword</b>	18 • Optical Trigger Model
<b>14 Warning</b>	18 • Buzz Function
<b>15 Name of Parts</b>	18 • Key Combination
15 • Body	18 • Alarm Display
15 • LCD Panel	19 • Memory Function
16 • Accessories	19 • Wireless Control Function
16 • Separately Sold Accessories	19 • Setting the Communication Channel
<b>16 Operations</b>	19 • Setting the Communication Group
16 • Flash Preparation	20 • Tube Replacement
17 • Power Connection	<b>20 Technical Data</b>
17 • Modeling Lamp	<b>21 Maintenance</b>
17 • Power Output Control	
17 • Test Button	
17 • Sync Triggering	
17 • <GR/CH>Group/Channel Button	


## Warning

To prevent damage to the product or injury to you or to others, read the following warnings in their entirety before using this product. Keep these safety instructions where users can read them for ready reference.

-  Do not disassemble or modify. Should the product break down, send the defective back to the authorized service center for inspection and maintenance.
-  Keep dry. Do not handle with wet hands, immerse in water, or expose to rain.
-  Keep out of reach of children.
-  Please put the device in a ventilation environment and keep the parts of lighting and heat dissipation holes are unobstructed. Do not use in flammable environment.
-  As this product adopts make and break device, please keep it easy to be used.
-  No touching the heating parts of this product.
-  Please turn off the power and wear insulated gloves before installing and connecting accessories. When replacing the tube or modeling lamp, please make sure that the tube is cool and wear insulated gloves to prevent burns.
-  Do not flash directly towards naked eyes (especially those of babies), otherwise it may lead to visual impairment.
-  Disconnect from the power supply when it will not be used for an extended period.
-  After 30 continuous flashes at full power, the flash should be cooled down for about 3 minutes. Overheating will occur if it is used continuously without cooling down.
-  Do not keep using the modeling lamp for a long time; otherwise flammable accessories attaching to flash head, e.g. softbox will get burnt. A 10-minute time is recommended in this case. After 10 minutes, cool it down for 1 minute.
-  When using a snoot, do not keep the modeling lamp on for a long time or fire too frequently (not over six times for one minute). Overheating will result in damages for strobe housing and/or studio light.
-  Avoid sudden impacts as this can damage the flash tube and/or modeling lamp.
-  Please remove the flash head protection cover before using.
-  Do not touch the area around this symbol since it is hot.

## Name of Parts

### Body

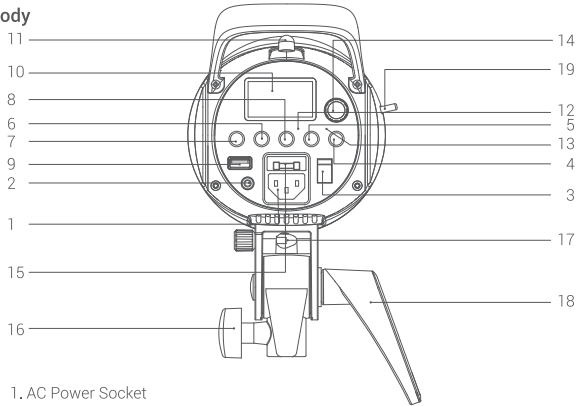


- |                                  |                                |
|----------------------------------|--------------------------------|
| 1. AC Power Socket               | 11. Light Sensor               |
| 2. Sync Cord Jack                | 12. Modeling Lamp Indicator    |
| 3. Power Switch Button           | 13. Test Indicator             |
| 4. Test Button                   | 14. SET Dial                   |
| 5. <MOD/OFF>Modeling Lamp Button | 15. Fuse                       |
| 6. <S1/S2>Optical Model Button   | 16. Mounting Bracket           |
| 7. <GR/CH>Group/Channel Button   | 17. Umbrella Input             |
| 8. BUZZ Button                   | 18. Direction Adjusting Handle |
| 9. Wireless Control Port         | 19. Fixing Mount Pusher        |
| 10. LCD Display                  |                                |

- |  |  |
|--|--|
| 1. Built-in 2.4G Wireless Transmission | 8. Flash Output                                    |
| 2. Built-in Wireless Channel           | 9. Modeling Lamp is off                            |
| 3. Built-in Wireless Channel Dial      | 10. Modeling Lamp is in the PROP mode              |
| 4. Optical Model Indicator             | 11. Modeling Lamp shows the power in percentage    |
| 5. Beep                                | 12. Modeling Lamp is off when triggering the flash |
| 6. Temperature Alarm Display           |  |
| 7. Built-in Wireless Group             |  |


## Accessories

 - Power Cord
- Lamp Cover
- Instruction Manual




## Separately sold accessories

 The product can be used in combination with the following accessories sold separately, so as to achieve best photography effects: X1, X2, XPro, XT16 or FT-16 remote control, Power Inverter, Softbox, Photographic Umbrella, Barndoor, Snoot, etc.




## LCD Panel

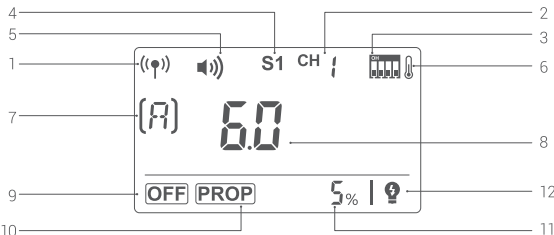

## OPERATIONS

### Flash Preparation

1. Attach the flash unit onto an appropriate light stand. Adjust the mounting bracket for a good angle and make sure it is tightened and fixed. Use the direction adjusting handle to adjust the flash to a desired direction. Umbrella input is for different photo umbrellas to put in.

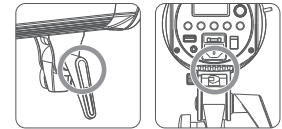

## Power Connection

Use the power cord to connect the flash to an AC power source and press the power switch button to power on and off.

## Modeling Lamp

Short press the <MOD/OFF> Button to change among OFF, PROP and percentage mode.

1. When <OFF> is displayed, the modeling light is off.
2. When <PROP> is displayed, the modeling light is in auto status and its power changes with the flash's power.
3. When percentage is displayed, the brightness of modeling light can be adjusted from 5% to 100%. Short press the SET Dial and the percentage value is blinking, turn the SET Dial to adjust the brightness and short press to exit.

When the modeling light is on, long press the <MOD/OFF> Button for 2 seconds to switch on the function that the modeling is off when triggering the flash, and the LCD panel shows ( ? ). Long press the <MOD/OFF> Button again to turn off the function.

**Safety Setting:** Modeling lamp will be off automatically after lighting for 4 hours, avoiding overheat due to long-time lighting when the user is not nearby.



When there is flammable accessory on the flash unit, do not keep the modeling lamp on for a long time. It is recommended to cool it down for one minute after 10 minutes' working.

## Power Output Control

SET dial decides different power output, satisfying light requirements in different environment. The power is adjustable freely from 1/16 to 1/1 which will be accordingly shown on the LCD display. "--" on the display indicates that the flash triggering function is turned off. Press the Test button to discharge power when the flash output is adjusted from high to low.

## Test Button

To fire the flash without taking a picture, press the test button. It can also help adjust the flash brightness when combined with the select dial.

Tip: Press the SET dial and turn on the flash to view its version.

## Sync Triggering

The sync cord jack (2) is a  $\Phi 3.5$ mm plug. Insert a trigger plug here and the flash will be fired synchronously with the camera shutter.

## <GR/CH> Group/Channel Button

Short press the <GR/CH> Group/Channel Button can adjust the built-in wireless group.

When the group indicator on the LCD panel is blinking, turn the SET dial to change. And long press the <GR/CH> Group/Channel Button can adjust the built-in wireless channel. When the channel indicator on the LCD panel is blinking, turn the SET dial to change.

## Optical Trigger Model

Three optical triggering models are available and can be set by pressing slave model button. ♦No optical control: S1 or S2 is not displayed on the LCD panel, indicating the optical triggering function is shut down.

♦Optic S1 Secondary Unit Setting: In M manual flash mode, press <S1/S2>optical button so that this flash can function as an optic S1 secondary flash with optic sensor. With this function, the flash will fire synchronously when the main flash fires, the same effect as that by the use of radio triggers. This helps create multiple lighting effects.

♦Optic S2 Secondary Unit Setting: Press <S1/S2>optical button so that this flash can also function as an optic S2 secondary flash with optic sensor in M manual flash mode. This is useful when cameras have pre-flash function. With this function, the flash will ignore a single "preflash" from the main flash and will only fire in response to the second, actual flash from the main unit.

## Buzz Function

The sound button is used for deciding whether there is sound reminder for ready flash after recharging. Short press the BUZZ button, when the buzz indicator is on the LCD panel, the buzz function is working; when it disappears, the buzz function is not working. A "BI" sound will be heard when it's fully charged.

## Key Combination

Synchronously press the <GR/CH> group/channel button and the <S1/S2> optical model button can turn on/off the built-in wireless transmission. If there are no wireless and channel indicators displayed on the LCD panel, the built-in wireless transmission is off. On the contrary, the built-in wireless transmission is on. Synchronously press the <S1/S2> optical model button and BUZZ button to recover factory settings.

## Alarm Display

Display	Warning
E0	The temperature sensor is not connected.
E1	When charging, the capacitance and voltage are not rising within 1 second.
E2	The fastest heating-up component is over the extra temperature.
E3	Discharged capacitance and voltage > rating +10%

Alarm sounds, BIBI, ringing per 0.5 second, Press SET dial to stop alarming.

## Memory Function

The device is equipped with memory function for the panel setting. It will help remember the panel setting 3 seconds after you set it. When starting up the flash next time, the panel setting will be the same as that before powering it off.

 
## Wireless Control Function

The flash unit has built-in 2.4G wireless transmission, which can be used together with X1 and XT16 flash trigger.

Synchronously press the <GR/CH> group/channel button and the <S1/S2> optical model button can turn on the built-in wireless transmission and the <f> is displayed. If there are other wireless flash systems nearby, you can change the channel IDs to prevent signal interference. The channel IDs of the transmitter unit and the receiver unit(s) must be set to the same.


The flash unit is built in with a Wireless Control Port so that you can wirelessly adjust the power level of the flash and the flash triggering.

To control the flash wirelessly, you need a FT-16 remote control set (on-camera and on-flash). Insert its receive end into the Wireless Control Port on the flash and insert the transmit end into the camera hot shoe. Settings made on the hotshoe-mounted transmit and receive ends will be wirelessly communicated to the flash. Then you can press the camera shutter release button to trigger the flash. You can also hold the transmit end at hand to control your off-camera flash.



 For full instructions on the use of FT series remote control, see its user manual.


## Setting the Communication Channel

 

1 Long press the <GR/CH> group/channel button for 2 seconds until the channel IDs is blinking.




 2 Turn the SET Dial to choose the channel from 1 to 32.



3 Press the <SET> Dial to confirm.


## Setting the Communication Group

 

1 Short press the <GR/CH> group/channel button for 2 seconds until the group IDs is blinking.



 
2 Turn the SET Dial to choose the group from 0 to F.



3 Press the <SET> Dial to confirm.

## Tube Replacement

Shut down the power and remove the power cord before replacing the flash tube. Wear insulated gloves to loosen the iron wire on the tube, keep a balanced hold on the two feet of the flash tube and pull out the old tube gently. Take down the feet casing from the old tube and put it on the new one. Hold two feet of the new tube, and target directly towards the two copper outlets, then push them slightly in. Twine the iron wire on the stainless steel sheet to fix the flash tube.

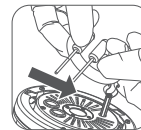

## Technical Data

Model	SK300IIV	SK400IIV
Max Power (Ws)	300Ws	400Ws
Guide Number(m ISO 100)	58	65
Operating Voltage	AC100V~120V~50/60Hz or AC200V~240V~50/60Hz	
Power Output Control	OFF,6.0~10.0(1/16~1/1)	
Modeling Lamp Power(W)	10W	

Modeling Lamp Level	5%~100%	
LED Modeling Lamp CCT	5700K±200K	
Recycle Time	0.1~1.5S	
Triggering Method	Sync cord, Optical triggering, Test button, Wireless control port	
Flash Duration	1/2000~1/800s	
Parameters output from the sync cord jack	5V	
Parameters output from the USB port	5V/200mA (only for Godox receiver)	
Fuse	AC200V-240V~50Hz: 5A AC100V-120V~60Hz: 8A	
Dimension	Flash diameterΦ13.7cm, height of flash with handle 20.6cm length of flash with lamp cover 35cm	Flash diameterΦ13.7cm, height of flash with handle 23.2cm length of flash with lamp cover 39cm
Net Weight	Approx.2kg	Approx.2.1kg

## Maintenance

Shut down the device immediately when it works abnormally and find out the reason.

Avoid sudden impacts and the lamp should be dedusted regularly.

It is normal for the lamp to be warm when in use. Avoid continuous flashes if unnecessary. Maintenance of the flash must be performed by our authorized maintenance department which can provide original accessories. The flash-tube and the modeling lamp are user-replaceable. Replacement tubes and lamps can be obtained from the manufacturer.

This product, except consumables e.g. flash tube and modeling lamp, is supported with a one-year warranty.

Unauthorized service will void the warranty.

If the product had failures or was wetted, do not use it until it is repaired by professional. Disconnect the power when cleaning the flash or when changing the flashtube / modeling lamp.

Changes made to the specifications or designs may not be reflected in this manual.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

## Warning

Operating frequency:2412.99MHz – 2464.49MHz (only receive)

## Declaration of Conformity:

GODOX Photo Equipment Co.,Ltd, hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.For more information of DoC, Please click this web link:[http://www.godox-.com/DOC/Godox\\_SK300II-V\\_SK400II-V\\_DOC.pdf](http://www.godox-.com/DOC/Godox_SK300II-V_SK400II-V_DOC.pdf).

The device complies with RF specifications when the device used at 0mm from your body.

# 产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

## 适用产品

本文件适用于相关《产品保修信息》(见后面说明)所列产品。其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

## 保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

## 如何获得保修服务

要保修服务，您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们可确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

## 不适用保修的情况

如产品存在下列情况，本文件项下的保证和服务将不适用 ①产品或部件超过相应保修期；②错误或不当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不当温度、溶剂、酸碱、水浸或潮湿环境；③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有识别信息被修改变更或删除；⑤无有效保修卡；⑥使用非法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的褪色，磨损和消耗，不是保修范围内的故障。

# 产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

产品类别	选项名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器等带电性能的部件	12	客户送修
其他	如闪光灯、造型灯泡、外壳、保护罩、锁紧装置、包装等。	无	无保修

神牛产品售后服务电话：0755-29609320-8062

## Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safekeep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note:		

Note: This form shall be sealed by the seller.

### Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

### Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time, And the purchase date is considered as the date registered on the warranty card when buying the product.

### How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

### Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: (1). The product or accessory has expired its warranty period; (2). Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; (3). Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; (4). The original identifying information of product or accessory is modified, alternated, or removed; (5). No valid warranty card; (6). Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; (7). Breakage or damage caused by force majeure or accident; (8). Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

## Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g.battery charger, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, lockingdevice, package, etc.	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062