

合格证

QC PASS



Wechat
Official Account
神牛微信公众号

深圳市神牛摄影器材有限公司

地址：深圳市宝安区福海街道塘尾社区耀川工业园厂房 2 栋

电话：0755-29609320 (8062) 传真：0755-25723423 邮箱：godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen 518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

www.godox.com


Made in China | 705-F7300R-01

UK
CA

CE

FC



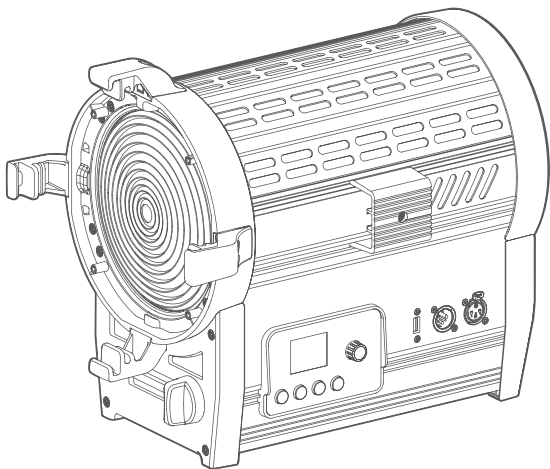

F7-300R

神牛全彩 LED 菲涅尔灯

GODOX Full-color LED Fresnel

使用手册

Instruction Manual

重要安全须知与注意事项

Godox 品牌 LED 摄影灯为专业设备，特别是大功率输出的摄影灯，仅限具备资质的技术人员操作。使用前请务必完整阅读并理解产品说明书，严格遵循安全操作指南。未按规范操作可能导致以下风险：人身伤亡、设备损坏或财产损失。



危险

- 本产品为摄影灯具，禁止儿童使用。当儿童靠近时，家长或陪护人必须密切监督，以免儿童因碰撞灯具或私用灯具造成人身伤害。
- 本产品并非普通照明灯具，不可用于普通照明，任何有过眼部损伤或眼部敏感的人群均应避免使用本灯具。灯具点亮时，任何情况下均禁止直视灯珠，应该在专业灯光师指导下使用强光，任何情况下避免长时间处于强光环境，如引起眼睛不适，请及时关闭灯具，暂停使用，及时就医。
- 高压电（交流电）供电的产品，使用带有接地保护装置的插座进行供电。
- 灯具点亮时，必须小心使用，禁止接触高温部件，如 LED 灯珠，避免造成灼伤。
- 禁止使用损坏的产品。产品在使用过程中，因跌落、受到挤压或遭受强烈冲击而造成外壳破裂，请勿继续使用，以免因接触到内部电子元件而受到电击伤害。
- 为避免火灾、电击或人身伤害危险，请仅使用生产商推荐的附件。如需使用延长线，请使用原厂延长线或者制造商推荐的延长线（额定电流 $\geq$ 该产品额定电流的延长线）。如延长线额定电流小于该产品，可能造成火灾、电击、其他严重的人身伤害危险或财产损失。
- 只能使用完好无损的接地连接电缆或制造商明确确认可用于供电产品运行的接地延长电缆。损坏或扭曲的连接电缆必须立即更换！产品输入电源线较长，请合理放置电源线，使其处于安全位置，避免电源线接触到过热物体、避免放置不当导致拉扯损坏或绊倒现场人员。
- 请勿私自拆卸产品，如产品出现故障，须由本公司或授权的维修人员进行检查维修。如灯珠损坏或因热变形，应停止使用，并及时联系制造商、服务代理商维修灯珠，以免发生意外。
- 请勿在易爆环境中（酒精、汽油等易挥发性溶剂或甲烷、乙烷等气体附近）使用和存放本产品。
- 产品在运行期间和运行后，灯头与用户、其他人员、热敏和可燃材料之间的距离必须随时保持至少 1 米以上。
- 在清洁和维修产品时，请先关机，再从电源插座上拔下该产品的电源线插头。不使用时，禁止拉扯电源线以将产品的电源线插头从电源插座中拔出。应是用手抓住产品的电源线插头两端，将插头从电源插座中拔出。

危险

- 部分产品无防水性能，此类产品请让其保持干燥，禁止浸入水中或其他液体中，安装时需干燥且通风处，避免在雨天、潮湿、多尘或过热环境下使用。请勿将任何物体置于灯具上或使液体流入灯具内部，以免发生意外。
- 不能阻挡、覆盖产品散热口。
- 使用后，产品完全冷切后才能包装。

小心

- 使用产品前，必须拆除所有运输包装材料和保护装置；
- 不使用产品时，请及时关机和停止供电；
- 请务必经常清洁灯珠玻璃并使其保持干净，玻璃如粘上蚊虫尸体或深色有机物污渍，可能引起玻璃炸裂。清洁本产品时，请勿用湿布擦拭，请用干燥的软布擦拭产品污垢。
- 安全说明依据本厂严格测试制定，产品设计和规格如有变更，恕不另行通知。客户可以登录神牛官网查看最新的电子版说明，了解产品最新资讯。

2 类风险



本产品可能释放出危险的光辐射，请勿直视光源。



本设备包含型号核准代码为：CMIIT ID: 24J44V807298，为该产品的无线电发射模块。

前言

感谢您购买神牛产品！


神牛全新推出全彩 LED 菲涅尔灯 F7-300R，支持 100V-240V 供电，可在全球范围内使用；拥有灵活调焦、全彩光色、千分级亮度调节、有线 DMX 及无线蓝牙控制等特性；适用于适用于多功能厅、媒体中心、演播室、摄影棚等拍摄场景。

部件名称

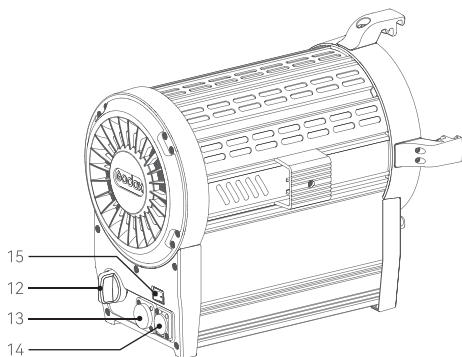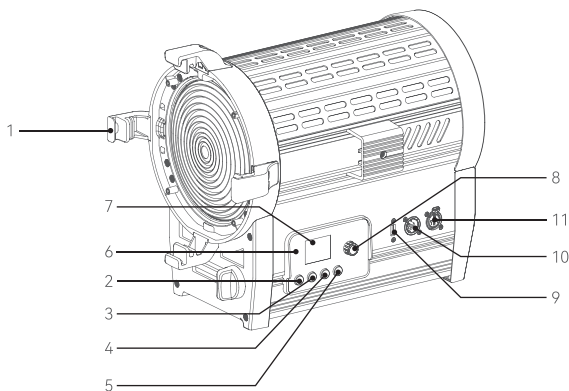


1. 遮扉夹槽
2. PRESET 按键
3. LOCK 按键
4. MENU 按键
5. MODE 按键
6. NFC 感应区
7. 彩屏
8. 调节旋钮
9. USB-A 接口
10. DMX IN 接口
11. DMX OUT 接口
12. 调焦旋钮
13. AC OUT 接口
14. AC IN 接口
15. 开关按键

F7-300R 物品清单

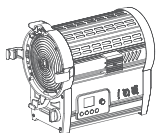


灯体 *1

 

U 型架 *1



硅胶圈 *1

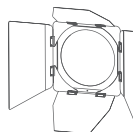

4 叶遮扉 *1



AC 电源输入插头 *1



AC 电源输出插头 *1



DMX IN 卡侬头 *1



DMX OUT 卡侬头 *1



灯具吊柄 *1




安全绳 *1




说明书 *1


F7-300R K1 物品清单

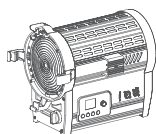

灯体 *1

 

U 型架 *1

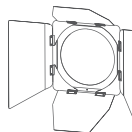

4 叶遮扉 *1



硅胶圈 *1



安全绳 *1



电源线 *1



说明书 *1


温馨提示：说明书中线图均为示意图，仅供参考。由于产品不断更新与升级，产品实物与线图可能存在差异，请以实物为准。

安装说明

U 架


灯珠面朝前，分别安装左右两侧：

左侧：U 架内侧卡入齿形固定片后垫上硅胶片，调节把手串入铜色金属垫片再串入黑色金属垫片的凸面，穿过 U 架孔及硅胶片，在灯具 U 架安装槽位置滑入一个六角螺母，孔位对准后顺时针旋转调节把手直到锁紧。

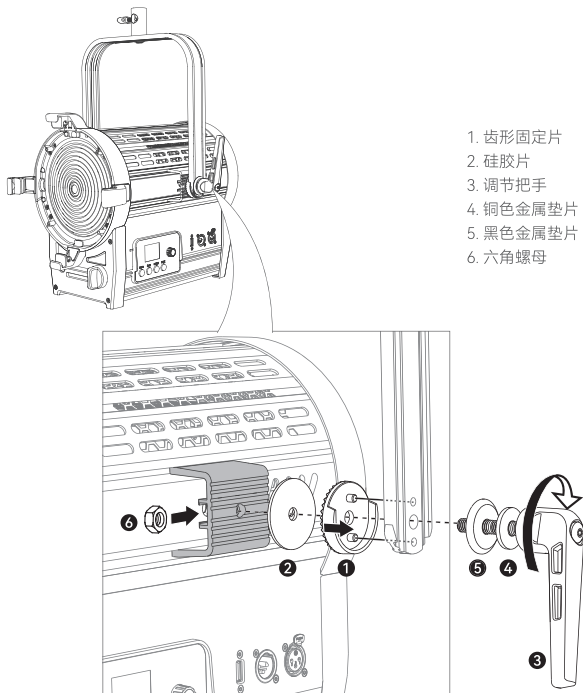


右侧: U 架内侧卡入齿形固定片后垫上硅胶片, 内六角螺丝串入黑色金属垫片的凸面, 穿过 U 架孔及硅胶片, 在灯具 U 架安装槽位置滑入一个六角螺母, 孔位对准后用扳手将内六角螺丝顺时针旋转直到锁紧, 整体 U 架即安装完毕。

1. 齿形固定片
2. 硅胶片
3. 内六角螺丝
4. 黑色金属垫片
5. 六角螺母
6. 扳手

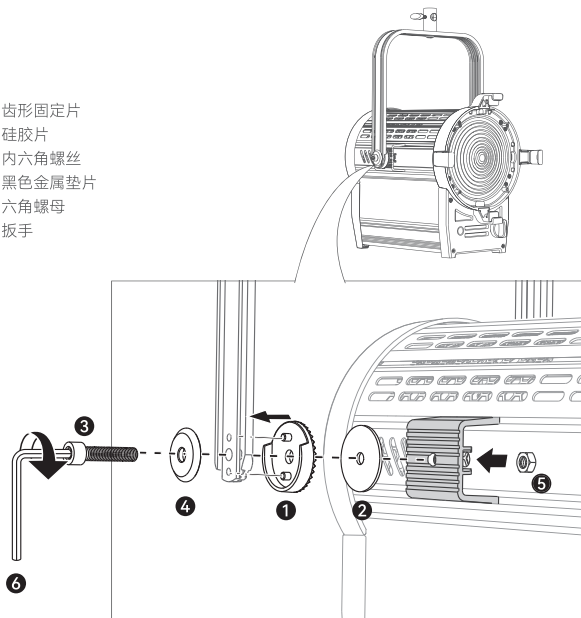


吊装使用 (F7-300R 物品)

灯具吊柄穿入 U 架的中间孔位后放入垫片再放入六角螺母，顺时针拧紧。

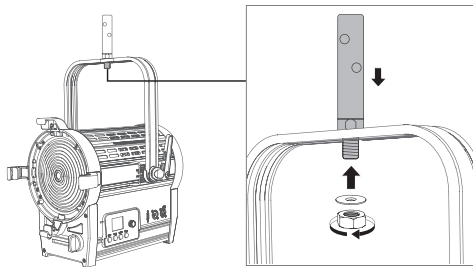





灯架使用 (F7-300R K1 物品)

旋钮插入套筒的侧面孔位顺时针拧紧，套筒对准 U 架的中间孔位后放入圆帽螺丝，顺时针拧紧。

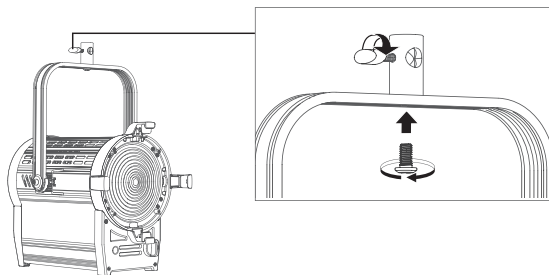


4 叶遮扉

1. 将遮扉夹槽最上方的卡扣往上拔出并右转；
2. 标配硅胶圈上的四个孔对准卡口处的四根螺丝柱，平稳套入，确保硅胶圈紧密贴合卡口；
- 3.4 叶遮扉沿着夹槽插入，最后将卡扣往回拨进行固定。

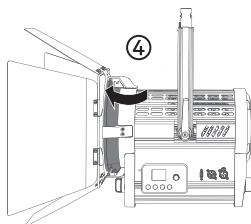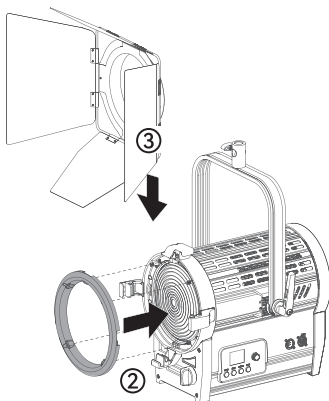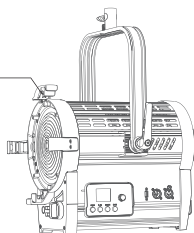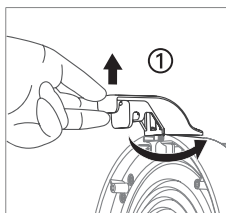

有线 DMX 连接

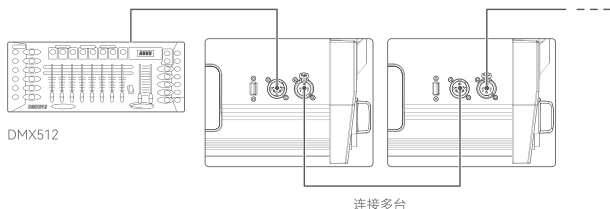


注：仅展示连接 DMX512 控制台方式，控制台及连接线需另购。

开机 / 关机

AC IN 接口接通电源后，将开关按键拨至 <|> 可开机，拨至 <O> 可关机。

模式选择

短按 MODE 按键进入模式选择，旋转调节旋钮可选图中任意一种模式，短按调节旋钮进入该模式的具体设置。通过短按并旋转调节旋钮设置参数值，顺时针旋转递增参数值，逆时针旋转递减参数值，设置完毕短按 MODE 按键返回上一级。

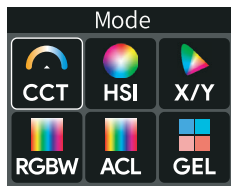


CCT 模式

短按 MODE 按键进入模式选择，选中 CCT 后短按调节旋钮进入该模式。

亮度范围：0.0% ~ 100.0%

色温范围：1800K ~ 10000K

GM 范围：-100% ~ +100%

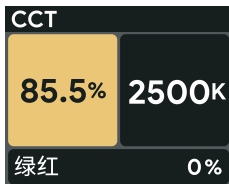


HSI 模式

短按 MODE 按键进入模式选择，选中 HSI 后短按调节旋钮进入该模式。

亮度范围：0.0% ~ 100.0%

色相范围：0° ~ 360°

饱和度范围：0% ~ 100%

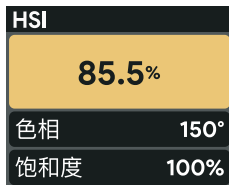


X-Y 模式

短按 MODE 按键进入模式选择，选中 X-Y 后短按调节旋钮进入该模式。

亮度范围：0.0% ~ 100.0%

X 坐标：0.0000 ~ 0.8500

Y 坐标：0.0000 ~ 0.8500

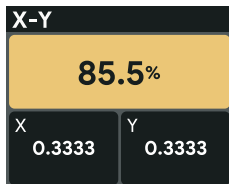

RGBW 模式

短按 MODE 按键进入模式选择，选中 RGBW 后短按调节旋钮进入该模式。


亮度范围：0.0% ~ 100.0%

红色范围：0.0% ~ 100.0%

绿色范围：0.0% ~ 100.0%

蓝色范围：0.0% ~ 100.0%

白色范围：0.0% ~ 100.0%

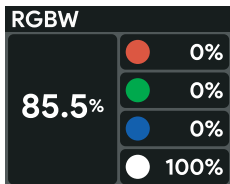

ACL 模式

短按 MODE 按键进入模式选择，选中 ACL 后短按调节旋钮进入该模式。

亮度范围：0.0% ~ 100.0%

红色范围：0.0% ~ 100.0%


绿色范围：0.0% ~ 100.0%

蓝色范围：0.0% ~ 100.0%

琥珀色范围：0.0% ~ 100.0%

青色范围：0.0% ~ 100.0%

黄绿色范围：0.0% ~ 100.0%

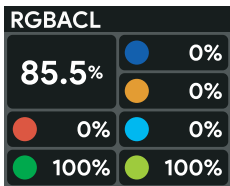

GEL 模式

短按 MODE 按键进入模式选择，选中 GEL 后短按调节旋钮进入该模式。

亮度范围：0.0% ~ 100.0%

色片类型：R-GEL/L-GEL


R-GEL 色片组：COR./CAL./SPC./CINE.

L-GEL 色片组：COR./COLOR./600/COS./700

色温：3200K 或 5600K

色相范围：-10° ~ 10°

饱和度范围：-20% ~ 20%

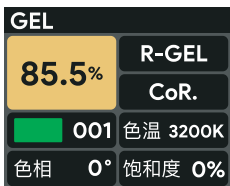

FX 模式

短按 MODE 按键进入模式选择，选中 FX 后短按调节旋钮进入该模式，通过旋转调节旋钮可选 14 类光效，短按调节旋钮进入某一类光效的具体设置。

光效	亮度	类型	色温 / 色相	速度	其他
闪光灯	0.0% - 100.0%	CCT/HSI	1800K-10000K/0-360°	1-100	模式：闪光灯 / 镁光灯 触发：自动 / 手动
雷闪电		×	1800K-10000K	×	闪烁次数：随机 / 1-10 频率：随机 / 2-20 触发：自动 / 手动
多云		×	×	随机 / 1-100	亮暗比例：10%-90%
坏灯泡		CCT/HSI	1800K-10000K/0-360°	1-100	×
电视机		CCT/HSI	×	1-100	×
蜡烛		×	×	1-100	×
火		×	×	1-100	×
烟花		×	×	1-100	余烬：1-100
爆炸		CCT/HSI	1800K-10000K/0-360°	1-100	余烬：1-100 触发：自动 / 手动
焊接		CCT/HSI	1800K-10000K/0-360°	1-100	×
警车		红 + 蓝、红、蓝、 蓝 + 白、蓝 + 黄、 黄、红 + 白 + 蓝、 红 + 黄 + 蓝	×	×	模式：1-5
SOS		CCT/HSI	1800K-10000K/0-360°	×	×
彩光循环		×	×	1-100	饱和度：0%-100%
派对		×	×	1-100	饱和度：0%-100%

注：根据需求旋转调节旋钮设置当前参数值，设置完毕后短按并旋转调节旋钮可跳入下一栏参数进行设置；选中手动时，通过短按一次调节旋钮触发一次该光效；某个光效设置完毕后短按 MODE 按键返回上一级。

菜单设置

短按 MENU 按键进入菜单界面，旋转并短按调节旋钮可进入图中任意一项的设置，设置完毕短按 MENU 按键返回上一级。



DMX

短按调节旋钮进入 DMX，通过短按并旋转调节旋钮设置参数值，如下表所示。



一级选项	二级选项	说明
地址	001-512	起始地址
DMX 模式	01: CCT 8 Bit	8 位 CCT 模式
	02: HSI 8 Bit	8 位 HSI 模式
	03: RGB 8 Bit	8 位 RGB 模式
	04: RGBW 8 Bit	8 位 RGBW 模式
	05: RGBACL 8 Bit	8 位 RGBACL 模式
	06: CCT+HSI 8 Bit	8 位 CCT+HSI 模式
	07: CCT+RGBW 8 Bit	8 位 CCT+RGBW 模式
	08: FX 8 Bit	8 位 FX 模式
	09: GEL 8 Bit	8 位 GEL 模式
	10: CCT 16 Bit	16 位 CCT 模式
	11: HSI 16 Bit	16 位 HSI 模式
	12: RGB 16 Bit	16 位 RGB 模式
	13: RGBW 16 Bit	16 位 RGBW 模式
	14: X-Y 16 Bit	16 位 X-Y 模式
	15: FX 16 Bit	16 位 FX 模式
	16: GEL 16 Bit	16 位 GEL 模式
RDM 状态	开启	开启 RDM，开启后控制台可设置灯具地址及 DMX 模式
	关闭	关闭 RDM
DMX 丢失状态	保持最后状态	失去 DMX 控制信号后，在关机或再次接收有效 DMX 控制信号前，持续使用最后一次接收的 DMX 控制信号。
	直接关闭	灯具直接熄灭
	保持最后状态 2 分钟熄灭	失去 DMX 控制信号后，持续使用最后一次接收的 DMX 控制信号 2 分钟，2 分钟后灯具熄灭。 注：如 2 分钟内接收到有效 DMX 控制信号，则使用新的 DMX 控制信号。
终止开关	开启	开启 DMX 终端
	关闭	关闭 DMX 终端
增强通道	开启	开启增强通道信号
	关闭	关闭增强通道信号
DMX 通道表	(扫描二维码查看)	

注：使用 DMX/RDM 控制台控制灯具，可登录官网 <https://www.godox.com.cn/> 下载 DMX 模式表。

蓝牙

短按调节旋钮进入蓝牙，通过短按并旋转调节旋钮设置开启或关闭；如需蓝牙重置，旋转调节旋钮到重置栏，短按调节旋钮即可；下方查看蓝牙 MAC 码，方便查找灯具。



“Godox Light”app 下载

扫描二维码即可下载“Godox Light”手机 app（安卓和苹果系统都可以使用）。

注:

1. 首个移动设备（手机或平板电脑）可直接使用 app 操控灯体。更换其他移动设备时，灯体需进行蓝牙重置方可正常使用 app。
2. app 需升级至 V3.0 以上版本。



调光曲线

短按调节旋钮进入调光曲线，通过旋转调节旋钮可选线性 / S 曲线 / 指数 / 对数，选定后短按调节旋钮完成设置。



平滑度

短按调节旋钮进入平滑度，通过旋转调节旋钮可选默认 / 平滑 / 平滑关，选定后短按调节旋钮完成设置。

平滑度	备注
默认	亮度数据进行基础平滑处理，实现平滑调光，缩短响应时间
平滑度	亮度数据进行平滑处理，实现超平滑调光，响应时间慢
关闭	未对亮度数据进行平滑处理，响应时间最快



控制模式

短按调节旋钮进入控制模式，通过旋转并短按调节旋钮设置常规模式频率，范围：默认 / 1-10。



色域空间

短按调节旋钮进入色域空间，通过短按并旋转调节旋钮可选原始色域 / 校色色域 / Rec.709 / DCI-P3，选定后短按调节旋钮完成设置。




风扇

短按调节旋钮进入风扇，通过旋转调节旋钮可选静音 / 自动 / 中速 / 高速，选定后短按调节旋钮完成设置。



屏幕设置

短按调节旋钮进入屏幕设置，通过短按并旋转调节旋钮设置屏幕亮度值，逆时针旋转递减亮度，顺时针旋转递增亮度，范围：10%-100%。

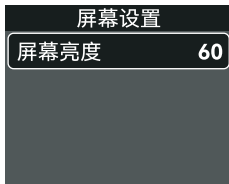


语言

短按调节旋钮进入语言，通过旋转调节旋钮可选中文 / English，选定后短按调节旋钮完成设置。



系统升级

短按调节旋钮进入系统升级，此界面可查看固件版本号与升级提示。

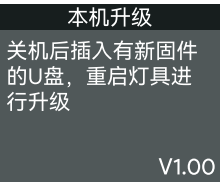

升级详情

1. 在官网 (<https://www.godox.com.cn/firmware-continuous-light>) 下载新固件到 U 盘上。
2. 在关机状态下，将存有新固件的 U 盘插入 USB-A 接口。
3. 开机，灯具自动进入升级界面。
4. 升级完毕自动跳回主界面。

注：

1. 必须在官网下载新固件，存放在 U 盘根目录里，而且仅有一个 BIN 文件。
2. USB-A 接口支持供电，输出电压电流 5V $\Rightarrow$ 1.5A，请勿接入大功率 USB 设备。

恢复出厂设置

短按调节旋钮进入恢复出厂设置，通过旋转调节旋钮可选确定 / 取消；短按调节旋钮确定恢复出厂，灯具自动重启，界面出现简体中文和 English 选项，设置需要的语言后灯体亮度值自动变为 100%。



关于本机

短按调节旋钮进入关于本机，此界面可查看灯具基础信息。



预设设置

短按 PRESET 按键进入灯具光效的预设界面，旋转调节旋钮选择 1-20 组预设。

1. 短按 MODE 按键进入主界面，设置好光效参数;
2. 短按 PRESET 按键进入预设界面，要将此光效参数存入预设 1，选定预设 1 后短按调节旋钮进行保存;
3. 已保存的预设组，短按调节旋钮可进行应用 / 保存 / 取消设置。



锁定设置

短按 LOCK 按键，屏幕出现〈🔒〉表示当前界面被锁定，再次短按 LOCK 按键便可解锁。

注：此锁定功能仅锁定本设备的操控面板，其他操作方式仍可正常进行。



NFC 加灯

通过手机 NFC 功能与灯具 NFC 芯片相互通信后完成快速添加灯具到【Godox light】App 中。

- 1、前置条件：灯具支持 NFC 添加、【Godox light】App 版本 V3.2.4 以上、手机开启蓝牙和 NFC 功能。
- 2、使用方法：前置条件成立情况下，打开【Godox light】进入对应场景中，点击【+】选择【NFC 加灯】功能，进入【NFC 添加设备】页面将手机 NFC 感应区靠近灯具感应区即可完成加灯，支持多灯添加。

注意：Android 系统直接靠近感应加灯，IOS 需点击右上角（📶）图标后出现弹窗感应加灯。

照度数据

色温	测试条件	照度单位	1m	2m	3m	5m
1800K	裸灯（聚光）	lux	41900	11000	4890	1840
		fc	3890	1020	454	171
	裸灯（泛光）	lux	8740	2420	1060	406
		fc	812	225	99	38
2800K	裸灯（聚光）	lux	58200	15100	6700	2500
		fc	5400	1400	623	233
	裸灯（泛光）	lux	12100	3320	1470	552
		fc	1130	308	137	51
3200K	裸灯（聚光）	lux	65300	17100	7600	2830
		fc	6070	1590	706	263
	裸灯（泛光）	lux	13700	3730	1660	627
		fc	1270	347	154	58
4300K	裸灯（聚光）	lux	86500	22600	10000	3740
		fc	8030	2100	932	348
	裸灯（泛光）	lux	18200	4970	2210	827
		fc	1690	462	205	77
5600K	裸灯（聚光）	lux	89500	23400	10500	3870
		fc	8320	2170	976	359
	裸灯（泛光）	lux	18700	5120	2290	857
		fc	1740	475	213	80
6500K	裸灯（聚光）	lux	89500	23600	10500	3880
		fc	8320	2190	976	360
	裸灯（泛光）	lux	18800	5240	2290	856
		fc	1740	477	213	80
8500K	裸灯（聚光）	lux	85400	22400	10000	3700
		fc	7940	2080	930	343
	裸灯（泛光）	lux	17900	4900	2210	827
		fc	1660	455	205	77
10000K	裸灯（聚光）	lux	84000	22100	9830	3660
		fc	7800	2050	913	340
	裸灯（泛光）	lux	17700	4850	2180	815
		fc	1640	450	202	76
R（红光）	裸灯（聚光）	lux	14100	3760	1690	614
		fc	1310	349	157	57
	裸灯（泛光）	lux	2930	810	361	134
		fc	273	75	34	12
G（绿光）	裸灯（聚光）	lux	22700	6050	2710	1000
		fc	2100	562	252	93
	裸灯（泛光）	lux	5330	1440	652	244
		fc	495	133	61	23
B（蓝光）	裸灯（聚光）	lux	7430	1950	874	341
		fc	690	182	81	32
	裸灯（泛光）	lux	1660	451	204	81
		fc	154	42	19	8

以上数据均为平均值，非绝对值，以上测试皆在灯体 100%亮度下进行。

规格参数

型号	F7-300R
AC INPUT 接口	100V-240V ~ 50/60Hz, 330W
色温范围	1800K ~ 10000K
GM 范围	-100% ~ 100%
调光范围	0.0% ~ 100.0%
调光曲线	线性 / S 曲线 / 指数 / 对数
FX 光效	14 类
CRI	≈ 98
TLCI	≈ 98
控制方式	有线 DMX/RDM, 蓝牙, 灯体控制
蓝牙控制距离	60m
USB-A 接口	固件升级 / 5V  1.5A 供电
工作环境温度	-20°C ~ 45°C
裸灯尺寸 _≈	380mm*250mm*325mm
裸灯净重 _≈	7.3kg

规格和参数如有变更，恕不另行通知。

Important Safety Instructions and Precautions

Godox LED lights, especially those with high power output, are professional equipment and should only be operated by professionals. Carefully read and fully understand the instruction manual before use and strictly follow the safety instructions. Failure to do so may result in death, serious injury, damage to the product, or other property damage.



Danger

- Professional lighting fixture is prohibited for children. When children are near, parents or guardians must supervise closely to prevent them from personal injury due to collision with light or private use of light.
- This product is not ordinary lighting fixture and cannot be used for general lighting. Anyone who has suffered eye damage or has sensitive eyes should avoid using this product. When the light is on, it is forbidden to look directly at the lamp beads under any circumstances. Strong light should be used under the guidance of professional lighting engineers. Avoid prolonged exposure to strong light under any circumstances. If it causes eye discomfort, turn off the light, suspend use and seek medical attention promptly.
- For high-voltage (mains) powered products, use a socket with an earth protection device for power supply.
- When the light is on, it must be used with care. Do not touch high-temperature parts, such as LED lamp beads, to avoid burns.
- Do not use damaged product. Stop using immediately if the product shell is cracked due to falling, squeezing, or strong impact, to avoid touching the internal electronic components and getting an electric shock.
- Please use only the accessories recommended by our factory to avoid fire, electric shock or personal injury. If an extension cord is required, use the original extension cord or one recommended by the manufacturer (an extension cord with a current rating greater than or equal to that of the equipment). Extension cords rated at less than that of the equipment may cause fire, electric shock, other serious personal injury hazards, or property damage.
- Use only intact ground connection cables or ground extension cables that have been expressly recognized by the manufacturer for use in the operation of powered products. Damaged or twisted connection cables must be replaced immediately! The product has a long input power cord, so please place the power cord in a safe position to avoid it coming into contact with overheated objects, being improperly placed and causing damage by pulling, or tripping over on-site personnel.
- Do not disassemble the product without permission. If the product malfunctions, it must be checked and repaired by authorized maintenance personnel. If the lamp bead is damaged or deformed by heat, stop using it, and contact the manufacturer, service agent or qualified maintenance personnel to replace the lamp bead in time to avoid accidents.
- Do not use and store this product in explosive atmospheres (near flammable volatile solvents such as alcohol, gasoline, or gases such as methane and ethane).
- Maintain at least 1 meter distance between the light head and the user, other people, and heat-

sensitive or flammable items during and after operation of the product.

- When cleaning and repairing the product, turn off the power before unplugging the product's power cord from the power outlet. When not in use, do not pull the power cord to unplug the product from the power outlet. Unplug the product from the power outlet by grasping both ends of the plug with your hands.



Warning

- This equipment is not waterproof, please keep it dry and do not immerse it in water or other liquids. The equipment should be installed in a dry and ventilated place, and avoid using it in rainy, humid, dusty or overheated environments. Do not place any objects on the light or let liquid flow into the light to avoid accidents.
- Do not block or cover the heat dissipation port of the product.
- After use, the product should be completely cooled before packaging.



Attention

- All transport protective materials and packages on the product must be removed before use.
- When not in use, please turn off the product and stop the power supply promptly.
- Please make sure to clean the glass of the lamp bead frequently and keep it clean, the glass may explode if it is stained with mosquito bodies or dark-colored organic matter. When cleaning the device, please do not use a wet cloth to wipe, please use a dry soft cloth to wipe the device dirt.
- The safety instructions are formulated according to the strict testing of the factory, and the design and specifications of the equipment are subject to change without prior notice. Customers can view the latest electronic instruction manuals on the official website of Godox and learn about the latest product information.

Risk Group 2



Caution



Possibly hazardous optical radiation emitted from this product. Do not stare at the operating light source.

Foreword

Thank you for purchasing!


Godox is excited to introduce its brand new full-color LED Fresnel F7-300R. With a voltage range of 100V to 240V, it's suitable for global usage. Featuring flexible zooming, adjustable full-color, thousand-bit brightness, wired DMX control and wireless Bluetooth control, it's perfect for shooting scenarios such as multi-function halls, media centers, broadcasting rooms, and shooting studios.

Names of Parts

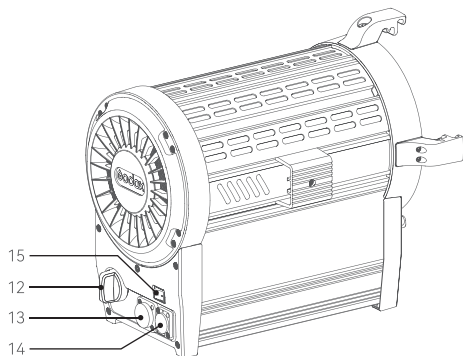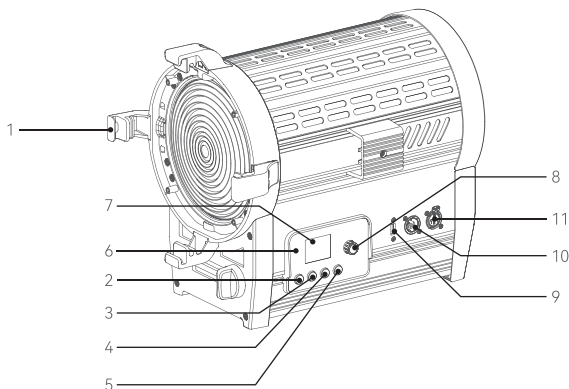


1. Barndoor Slot
2. PRESET Button
3. LOCK Button
4. MENU Button
5. MODE Button
6. NFC Sensing Area
7. Display
8. Select Dial
9. USB-A Port
10. DMX IN Port
11. DMX OUT Port
12. Zoom Dial
13. AC OUT Port
14. AC IN Port
15. Power Switch Button

What's Inside F7-300R

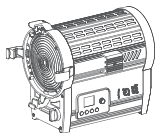


Light Body *1

 

U-type Bracket *1



Silicone Ring *1

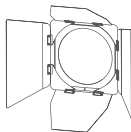

Barndoor *1



AC Input Plug *1



AC Output Plug *1



DMX IN XLR Plug *1



DMX OUT XLR Plug *1



Fixture Handle *1




Safety Rope *1




Instruction Manual *1


What's Inside F7-300R K1

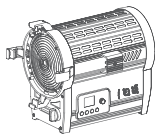

Light Body *1

 

U-type Bracket *1

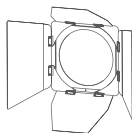

Barndoor *1



Silicone Ring *1



Safety Rope *1



Power Cord *1



Instruction Manual *1


Note: Due to continuous updates and upgrades of the products, there may be differences between the actual products and the pictures. Therefore, the pictures are for reference only, products to prevail in kind.

Installation Instructions


U-type Bracket

With the light beads facing forward, install on both sides as follows:

Left: After inserting the toothed fixing sheet into the inner side of the U-type bracket and placing a silicone sheet, thread the adjustment handle through the convex surface of the black metal gasket after passing it through the copper-colored metal gasket first, then through the U-type bracket hole and silicone sheet. Slide a hexagon nut into the mounting slot of the U-type bracket. Once the holes are aligned, rotate the adjustment handle clockwise until it's tightened.

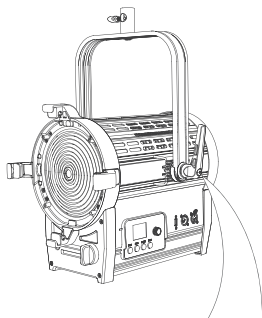


1. Toothed Fixing Sheet
2. Silicone Sheet
3. Adjustment Handle
4. Copper-colored Metal Gasket
5. Black Metal Gasket
6. Hexagon Nut

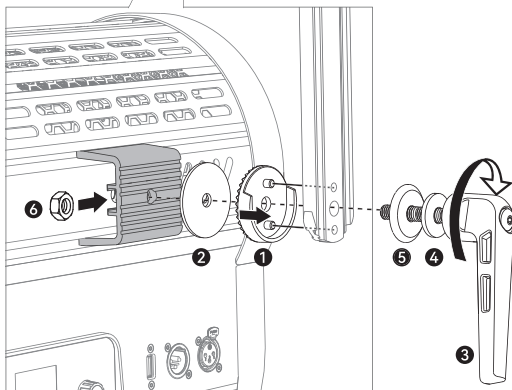


Right: After inserting the toothed fixing sheet into the inner side of the U-type bracket and placing a silicone sheet, thread the hexagon socket screw through the convex surface of the black metal gasket, then through the U-type bracket hole and silicone sheet. Slide a hexagon nut into the mounting slot of the U-type bracket. Once the holes are aligned, use a wrench to rotate the hexagon socket screw clockwise until it's tightened, and the overall U-type bracket is now properly installed.

- 1.Toothed Fixing Sheet
- 2.Silicone Sheet
- 3.Hexagon Socket Screw
- 4.Black Metal Gasket
- 5.Hexagon Nut
- 6.Wrench

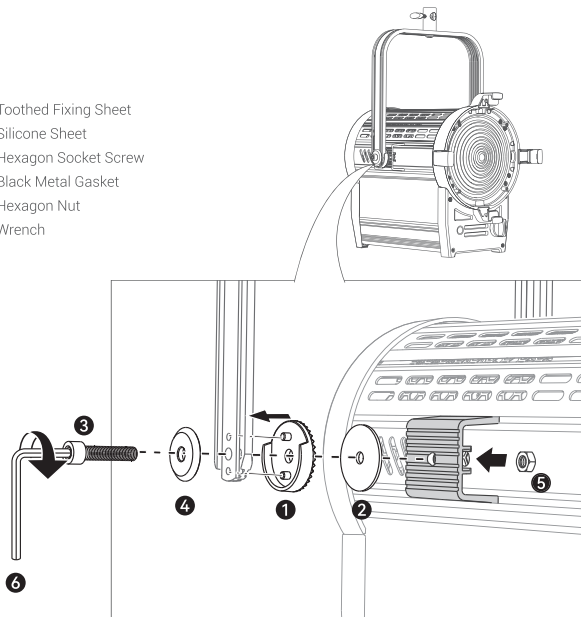


Hoisting Usage (for F7-300R)

Insert the fixture handle into the center hole of the U-type bracket. Place the gasket, then the hexagon nut, and rotate clockwise to tighten.

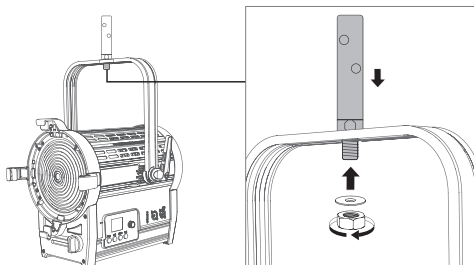





Light Stand Usage (for F7-300R K1)

Insert the dial into the side hole of the sleeve and rotate clockwise to tighten. Align the sleeve with the center hole of the U-type bracket, insert the round cap screw, and rotate clockwise to tighten.

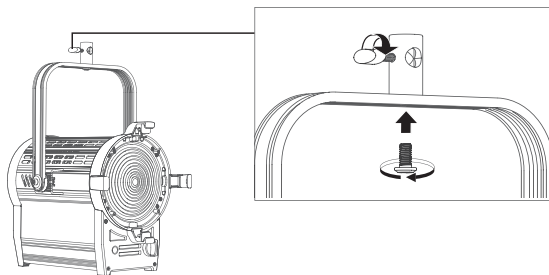


Barndoor

1. Remove the top buckle on the barndoor slot and rotate right.
2. Align the four holes on the attached silicone ring with the four screw posts on the mount and smoothly slide it, ensuring the silicone ring fits snugly against the mount.
3. Then insert the barndoor along the slot, and pull the buckle back to secure it.

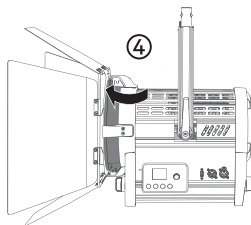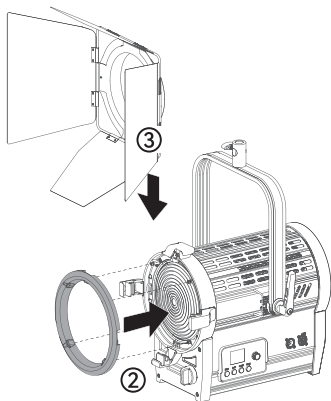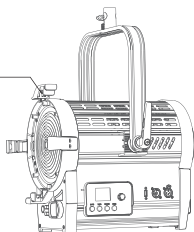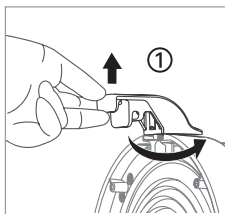

Wired DMX Connection

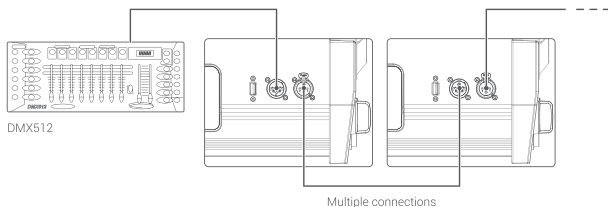


Note: The above pictures only show the method to connect the DMX512 controller, the controller and connecting cable are sold separately.

Power Switch

Toggle the power switch button to < I > after connected to power source via AC IN port to turn it on, toggle to < O > to turn it off.

Mode Selection

Short press the MODE button to enter selection interface, rotate the select dial to select the desired mode, then press it to enter the corresponding parameter settings. Rotate the select dial clockwise to increase the parameters, while rotate anticlockwise to decrease the parameters. Short press the MODE button to return to the previous interface.

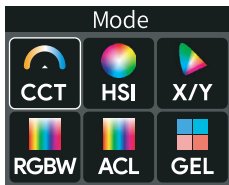


CCT Mode

Short press the MODE button to enter mode selection, rotate and press the select dial to select CCT mode, in which you can adjust the DIM/CCT/GM.

DIM range: 0.0%-100.0%

CCT range: 1800K~10000K

GM range: -100%~+100%

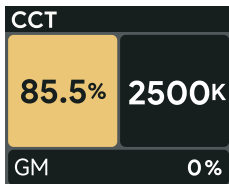


HSI Mode

Short press the MODE button to enter mode selection, rotate and press the select dial to select HSI mode, in which you can adjust the DIM/HUE/SAT.

DIM range: 0.0%-100.0%

HUE range: 0°~360°

SAT range: 0%~100%

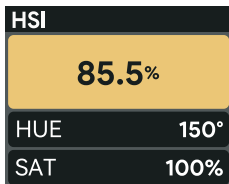


X-Y Mode

Short press the MODE button to enter mode selection, rotate and press the select dial to select X-Y mode, in which you can adjust the DIM/X coordinate/Y coordinate.

DIM range: 0.0%-100.0%

X coordinate: 0.0000~0.8500

Y coordinate: 0.0000~0.8500

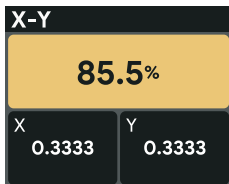

RGBW Mode

Short press the MODE button to enter mode selection, rotate and press the select dial to select RGBW mode, in which you can adjust the DIM/red/green/blue/white.


DIM range: 0.0%-100.0%

Red range: 0.0%-100.0%

Green range: 0.0%-100.0%

Blue range: 0.0%-100.0%

White range: 0.0%-100.0%

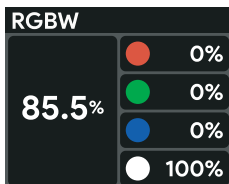

ACL Mode

Short press the MODE button to enter mode selection, rotate and press the select dial to select ACL mode, in which you can adjust the DIM/red/green/blue/Amber/Cyan/Lime.

DIM range: 0.0%-100.0%

Red range: 0.0%-100.0%


Green range: 0.0%-100.0%

Blue range: 0.0%-100.0%

Amber range: 0.0%-100.0%

Cyan range: 0.0%-100.0%

Lime range: 0.0%-100.0%

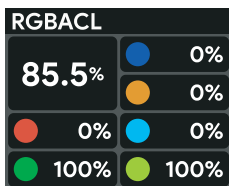

GEL Mode

Short press the MODE button to enter mode selection, rotate and press the select dial to select GEL mode, in which you can adjust the following parameters.

DIM range: 0.0%-100.0%

Gel type: R-GEL/L-GEL


R-GEL: COR./CAL./SPC./CINE.

L-GEL: COR./COLOR./600/COS./700

CCT range: 3200K or 5600K

HUE range: -10°~10°

SAT range: -20%~20%

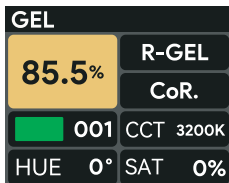

FX Mode


Short press the MODE button to enter mode selection, rotate and press the select dial to select FX mode, in which you can choose among the following 14 effects and adjust their respective parameters.

Effect	DIM	Type	CCT/HUE	Speed	Others
Flash	0.0%-100.0%	CCT/HSI	1800K-10000K/0-360°	1-100	Mode: Camera Flash/ Flash Bulb Trigger: Auto/Manual
Lightning		×	1800K-10000K	×	Times: Random/1-10 Frequency: Random /2-20 Trigger: Auto/Manual
Cloudy		×	×	Random/1-100	Ratio: 10%-90%
Broken Bulb		CCT/HSI	1800K-10000K/0-360°	1-100	×
TV		CCT/HSI	×	1-100	×
Candle		×	×	1-100	×
Fire		×	×	1-100	×
Firework		×	×	1-100	Embers: 1-100
Explosion		CCT/HSI	1800K-10000K/0-360°	1-100	Embers: 1-100 Trigger: Auto/Manual
Welding		CCT/HSI	1800K-10000K/0-360°	1-100	×
Police Car		Red+Blue, Red, Blue, Blue+White, Blue+Yellow, Yellow, Red+White+ Blue, Red+Yellow+Blue	×	×	Mode: 1-5
SOS		CCT/HSI	1800K-10000K/0-360°	×	×
RGB Cycle		×	×	1-100	SAT: 0%-100%
Party		×	×	1-100	SAT: 0%-100%

Note: Please rotate the select dial to adjust the parameters, then press the and rotate the select dial to the next parameter. Select manual, the effect can be triggered once by pressing the select dial once. After a certain effect is set, press MODE button can return to the 14 effects interface.


MENU Settings

Press the MENU button to enter menu interface, rotate and press the select dial to enter the following setting options, press the MENU button can return to the previous interface.

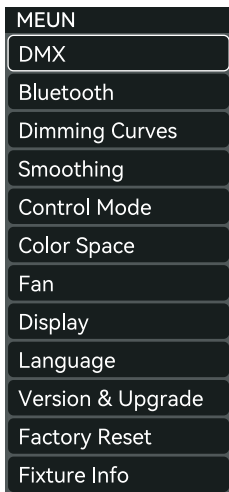

DMX

Short press the select dial to enter DMX interface, press and rotate the select dial to adjust the following settings.

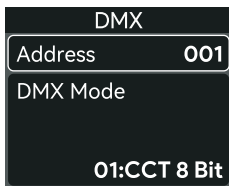


Level 1 Option	Level 2 Option	Description
Address	001-512	Initial address
DMX Mode	01: CCT 8 Bit	CCT mode in 8bit
	02: HSI 8 Bit	HSI mode in 8bit
	03: RGB 8 Bit	RGB mode in 8bit
	04: RGBW 8 Bit	RGBW mode in 8bit
	05: RGBACL 8 Bit	RGBACL mode in 8bit
	06: CCT+HSI 8 Bit	CCT+HSI mode in 8bit
	07: CCT+RGBW 8 Bit	CCT+RGBW mode in 8bit
	08: FX 8 Bit	FX mode in 8bit
	09: GEL 8 Bit	GEL mode in 8bit
	10: CCT 16 Bit	CCT mode in 16bit
	11: HSI 16 Bit	HSI mode in 16bit
	12: RGB 16 Bit	RGB mode in 16bit
	13: RGBW 16 Bit	RGBW mode in 16bit
	14: X-Y 16 Bit	X-Y mode in 16bit
	15: FX 16 Bit	FX mode in 16bit
	16: GEL 16 Bit	GEL mode in 16bit
RDM State	On	Turn on RDM, the controller can set the fixture address and DMX mode
	Off	Turn off RDM
DMX Lost	Hold Last Command	After the DMX control signal is lost, continue to use the last received DMX control signal until power down or a valid DMX control signal is received again.
	Black Out	The light is off immediately.
	Black Out After 2 min	After the DMX control signal is lost, continue to use the last received DMX control signal for 2 minutes then black out. Note: If a valid DMX control signal is received within 2 minutes, then use the new DMX control signal.
Termination	On	Turn on DMX terminal
	Off	Turn off DMX terminal
Ext-Channels	On	Turn on extend DMX channels
	Off	Turn off extend DMX channels
DMX Table	Scan to check the DMX table	

Note: Please refer to the DMX mode specification to control the device by DMX/RDM. The electronic version can be downloaded from the official website <https://www.godox.com>.

Bluetooth

Short press the select dial to enter Bluetooth interface, press and rotate the select dial to Bluetooth to turn it on or off. If you need to reset the Bluetooth, rotate the select dial to reset and press it. The MAC code is on the corner for quick check.

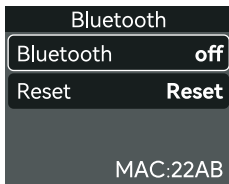

"GODOX Light" app Downloading

Scan the QR code to download the "Godox Light" smartphone app (can be used in Android and iOS).


Note:

1. The app can be used directly on the firstly installed device (smartphone or tablet). When change to other mobile device (smartphone or tablet), the light shall be reset before the normal connection of the app.
2. The app should be version 3.0 or above.



Dimming Curves


Short press the select dial to enter dimming curves interface, press and rotate the select dial to select among linear, S-curve, exponential and logarithmic.

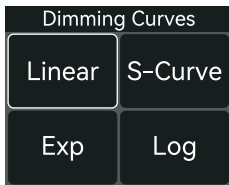

Smoothing


Short press the select dial to enter smoothing interface, press and rotate the select dial to choose among default, smooth and off.

Smoothing	Note
Default	The brightness data is basically smoothed to achieve smooth dimming and shorten the response time.
Smooth	The brightness data is smoothed to achieve ultra-smooth dimming with a slow response time.
Off	No smoothing of brightness data, fastest response time.

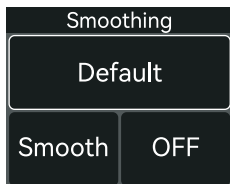

Control Mode

Short press the select dial to enter control mode interface, press and rotate the select dial to adjust the frequency of normal mode among default or from 1 to 10.

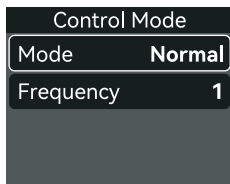


Color Space

Short press the select dial to enter color space interface, press and rotate the select dial to choose among original gamut, correction gamut, Rec.709 and DCI-P3.




Fan

Short press the select dial to enter fan interface, press and rotate the select dial to select among off, auto, medium and high.

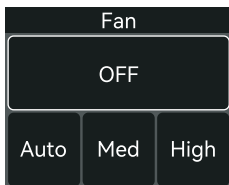

Display

Short press the select dial to enter display interface, press and rotate the select dial to adjust the display brightness from 10% to 100%.

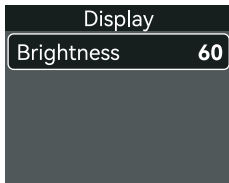

Language

Short press the select dial to enter language interface, press and rotate the select dial to choose between simplified Chinese and English.



Version & Upgrade

Short press the select dial to enter version & upgrade interface to check the firmware version and upgrade instruction.

Firmware Upgrade

1. Download the new firmware to the U disk from official website (<https://www.godox.com/firmware-continuous-light>).
2. Turn off the device. Insert the U disk with new firmware into the USB-A port.
3. Turn on the device, and it will automatically enter the upgrading interface.
4. It will return to main interface after completion.

Notes:


1. New firmware must be downloaded from the official website, and keep only one BIN file in the root directory of the USB disk.
2. The USB-A port can only support output voltage and current of 5V = 1.5A. Do not connect to over-rated USB device.

Factory Reset

Short press the select dial to enter factory reset interface to choose apply or cancel. If you choose apply, the device will automatically reset and reboot, then simplified Chinese and English options show on the display for your choice, after which the brightness will turn to 100% automatically.

Fixture Info


Short press the select dial to enter fixture info interface to check the product basic information.

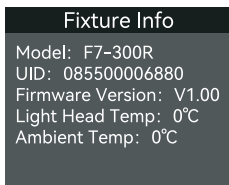

Preset Setting

Short press the PRESET button to enter preset effects interface. Rotate and press the select dial to choose and enter preset effects 1-20.

1. Short press the MODE button to enter the mode interface and set the desired parameters.
2. Short press the PRESET button to enter the preset interface, if you want to save this effect as preset 1, choose preset 1 and press the select dial to save.
3. You can apply, save or cancel the preset groups by rotating and pressing the select dial.

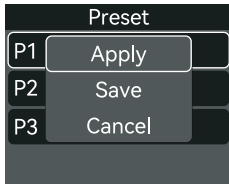

Lock Setting

Short press the LOCK button, the panel is locked when  is displayed on the panel, press it again to unlock.

Note: The locking function only works on the controller panel, other operations are still available.



NFC Fixture Addition

Use the NFC function of smartphone and NFC chip of the light fixture to connect them, then add the light fixture to **【Godox Light】** app.

1. Preconditions: light fixture supports NFC addition, **【Godox Light】** app is V3.2.4 or above, Bluetooth and NFC functions of smartphone are turned on.
2. Operation Instructions: subject to the fulfillment of preconditions, turn on the **【Godox Light】** app and enter the corresponding scene, click **【+】** to select **【NFC Addition】** function, bring the NFC sensing area of smartphone near the sensing area of light fixture to scan to add in **【NFC Addition】** interface, bulk addition is also supported.

Note: Android systems can complete the addition by directly closing the sensing area, while iOS system need to click the  icon on the right top and wait for the pop-up window then add.

Illuminance Data

CCT	Testing Condition	Unit	1m	2m	3m	5m
1800K	Bare Light (Spot)	lux	41900	11000	4890	1840
		fc	3890	1020	454	171
	Bare Light (Flood)	lux	8740	2420	1060	406
		fc	812	225	99	38
2800K	Bare Light (Spot)	lux	58200	15100	6700	2500
		fc	5400	1400	623	233
	Bare Light (Flood)	lux	12100	3320	1470	552
		fc	1130	308	137	51
3200K	Bare Light (Spot)	lux	65300	17100	7600	2830
		fc	6070	1590	706	263
	Bare Light (Flood)	lux	13700	3730	1660	627
		fc	1270	347	154	58
4300K	Bare Light (Spot)	lux	86500	22600	10000	3740
		fc	8030	2100	932	348
	Bare Light (Flood)	lux	18200	4970	2210	827
		fc	1690	462	205	77
5600K	Bare Light (Spot)	lux	89500	23400	10500	3870
		fc	8320	2170	976	359
	Bare Light (Flood)	lux	18700	5120	2290	857
		fc	1740	475	213	80
6500K	Bare Light (Spot)	lux	89500	23600	10500	3880
		fc	8320	2190	976	360
	Bare Light (Flood)	lux	18800	5240	2290	856
		fc	1740	477	213	80
8500K	Bare Light (Spot)	lux	85400	22400	10000	3700
		fc	7940	2080	930	343
	Bare Light (Flood)	lux	17900	4900	2210	827
		fc	1660	455	205	77
10000K	Bare Light (Spot)	lux	84000	22100	9830	3660
		fc	7800	2050	913	340
	Bare Light (Flood)	lux	17700	4850	2180	815
		fc	1640	450	202	76
R (Red)	Bare Light (Spot)	lux	14100	3760	1690	614
		fc	1310	349	157	57
	Bare Light (Flood)	lux	2930	810	361	134
		fc	273	75	34	12
G (Green)	Bare Light (Spot)	lux	22700	6050	2710	1000
		fc	2100	562	252	93
	Bare Light (Flood)	lux	5330	1440	652	244
		fc	495	133	61	23
B (Blue)	Bare Light (Spot)	lux	7430	1950	874	341
		fc	690	182	81	32
	Bare Light (Flood)	lux	1660	451	204	81
		fc	154	42	19	8

Note: All the data are average values instead of absolute values. All the above tests are based on the condition of 100% brightness.

Technical Data

Model	F7-300R
AC INPUT Port	100V-240V ~ 50/60Hz, 330W
CCT Range	1800K ~ 10000K
GM Adjust	-100% ~ 100%
Brightness Range	0.0% ~ 100.0%
Dimming Curves	linear, S-curve, exponential, logarithmic
FX Modes	14
CRI	≈98
TLCI	≈98
Controlling Methods	Wired DMX/RDM, Bluetooth, light body control
Bluetooth Controlling Distance	60m
USB-A Port	Firmware Upgrade/5V ➡ 1.5A Power Supply
Working Environment Temperature	-20°C ~ 45°C
Bare Light Dimension≈	14.96*9.84*12.8"
Bare Light Net Weight≈	7.3kg

Specifications and data may subject to changes without notice.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

Warning

Operating frequency: 2402MHz – 2480MHz(BT)

Maximum EIRP Power: 5dBm(BT)

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

IC Warning

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Tout changement ou modification non expressément approuvé par la partie responsable de la réglementation de l'OCDE peut faire perdre à l'utilisateur le droit d'utiliser l'appareil.

Remarque: cet appareil a été testé pour répondre aux limites des appareils numériques de classe B conformément à la partie 15 des règles de la Federal Communications Commission des États-Unis. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans les installations résidentielles. L'appareil génère de l'énergie RF utilisée et rayonne, ce qui peut causer des interférences nocives pour les communications radio s'il n'est pas installé et utilisé conformément aux instructions. Cependant, aucune Garantie contre les interférences dans une installation spécifique. Si l'appareil cause des interférences nuisibles à la réception de la radio ou de la télévision, qui peuvent être déterminées en éteignant et en allumant l'appareil, l'utilisateur est encouragé à tenter de corriger les interférences par une ou plusieurs des mesures suivantes:

- redirection ou repositionnement de l'antenne de réception.
- augmenter l'espacement entre l'appareil et le récepteur.
- Connecter l'appareil à une prise sur un circuit différent de celui auquel le récepteur est connecté.
- consultez votre revendeur ou un technicien radio / tv expérimenté pour obtenir de l'aide.

Avertissement RF pour les appareils portables:

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences.

Équipement Peut être utilisé sans restriction dans des conditions d'exposition portables.

产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

产品信息

本文件适用于相关《产品保修信息》（见后面说明）所列产品，其他非属此范围的产品或部件（如促销品、赠品及其他出厂后附加的部件等）不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

不适用保修情况

如产品存在下列情况，本文件项下的保证和服务将不适用：①产品或部件超过相应保修期；②错误或不适当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有识别信息被修改变更或删除；⑤无有效保修卡；⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色、磨损和消耗，不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

产品类别	选件名称	保修期（月）	保修服务类型
部件	电路板	12	客户送修
其他	光效附件、各类线材、航空箱或其他包装	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

Applicable ProductsThe document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items,giveaways and additional accessories attached,etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories isimplemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time,And the purchase date is considered as the date registered onthe warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ① **The product or accessory has expired its warranty period;** ② **Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc;** ③ **Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment;** ④ **The original identifying information of product or accessory is modified, alternated, or removed;** ⑤ **No valid warranty card;** ⑥ **Breakage or damage caused by using illegally authorized, nonstandard or non-public released software;** ⑦ **Breakage or damage caused by force majeure or accident;** ⑧ **Breakage or damage that could not be attributed to the product itself.** Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts with electrical properties	Circuit board	12	Customer sends the product to designated site
Other Items	Optical accessories, cables, flight case or other packages, etc.	No	Without warranty

Godox After-sale Service Call +86-755-29609320(8062)