


Godox

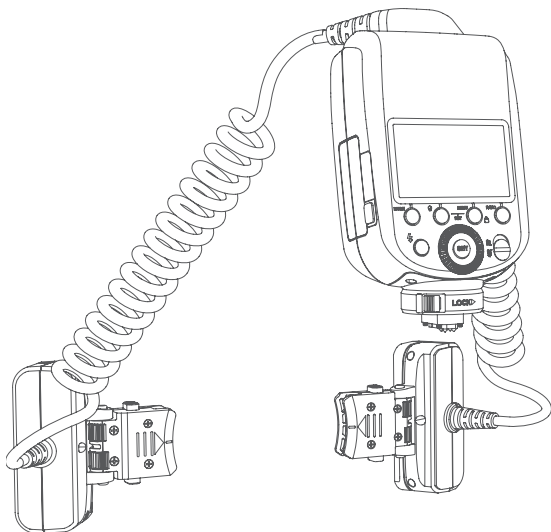

MF-T76

Instruction Manual

Important Safety Instructions

This product is a professional photographic equipment, to be operated by professional personnel only.

All transport protective materials and packaging on the product must be removed before use. The following basic safety precautions must be followed when using this product:

1. Carefully read and fully understand the instruction manual before use and strictly follow the safety instructions. Failure to do so may result in serious injury, damage to the product, or other property damage.
2. High voltage exists when the flash is powered on. Internal capacitors will remain charged for some time after power off.
3. This product is a professional lighting fixture, children are prohibited from using it. Children must be closely supervised by adults when approaching the fixture, to prevent collisions with the fixture or unauthorized use that could cause personal injury.
4. This is not an ordinary lighting fixture and must not be used for general illumination. Anyone with a history of eye damage or sensitivity should avoid using this fixture or looking directly at it.
5. Extreme caution must be exercised when using it, do not touch high-temperature parts such as flash tubes and surrounding metal components to avoid burns.
6. Do not point the flash directly at the eyes (especially baby's eyes) under any circumstances, as this could impair vision in a short time. Turn off immediately if discomfort occurs, stop using, and seek medical attention promptly.
7. If the flash tube or LED Modeling Lamp is damaged or thermally deformed, stop using it immediately and contact the manufacturer, service agent, or qualified repair personnel for a replacement to prevent accidents.
8. Do not use damaged equipment or accessories. Allow professional repair technicians to inspect and confirm normal operation before continuing use after repairs.
9. Stop using immediately if the product shell is cracked due to falling, squeezing, or strong impact, to avoid touching the internal electronic components and getting an electric shock.
10. This device is not waterproof. Keep it dry and avoid immersing it in water or other liquids. It should be installed in a ventilated and dry location and avoid using in rainy, humid, dusty, or overheated environments. Do not place items above the device or allow liquids to flow into it to prevent danger.
11. Do not disassemble without authorization. If the product malfunctions, it must be inspected and repaired by our company or authorized repair personnel.
12. Before storing, make sure that the equipment has cooled down completely. The equipment should be placed in the carrying case or in a ventilated dry place.
13. Do not place the device near alcohol, gasoline, or other flammable volatile solvents or gases such as methane and ethane.
14. Do not use or store this device in potentially explosive environments.

15. Do not use accessories not been approved by our company, as this may cause fire, electric shock or personal injury.
16. Clean gently with a dry cloth. Do not use a wet cloth as it may damage the device.
17. This instruction manual is based on rigorous testing. Changes in design and specifications are subject to change without notice. Check official website for latest instruction manual and product updates.
18. Use only specified charger and follow proper usage instructions for certain products with built-in lithium batteries, within the rated voltage and temperature range.
19. Some products are powered by lithium batteries. These lithium-ion batteries have a limited lifespan, typically lasting 300-500 complete charge-discharge cycles. As usage frequency and duration increase, its maximum storage capacity will gradually decrease, which is a normal phenomenon. Please regularly check the battery's condition, and if the charging time significantly increases or the battery life significantly decreases, consider replacing it with a new battery.
20. Some products are equipped with lithium batteries. The recommended storage guidelines are as follows: Before storage, charge the battery to approximately 50% capacity. Charge it to about 50% at least every six months. Failure to perform maintenance charging over an extended period may cause the battery to suffer permanent performance degradation or even become unusable due to excessive discharge. If the battery is removable, store it separately. The storage temperature should be within the range of 0°C to 40°C.
21. Some products are powered by lithium batteries. Please note:
 - Do not disassemble, crush, or puncture the battery;
 - The battery is not waterproof, do not immerse it in fog or water;
 - Avoid short-circuiting the battery contacts;
 - Do not expose the battery to or put it into fire;
 - Do not expose the battery to temperatures above 60°C;
 - Keep out of reach of children;
 - Protect the battery from excessive shock or vibration;
 - Do not use a damaged battery;
 - If the battery leaks, avoid contact with the leaking fluid;
 - If the battery fluid comes into contact with your eyes, immediately rinse with water for at least 15 minutes. Lift your eyelids until there are no signs of fluid and seek medical attention promptly.
22. Confirm and comply with all relevant local laws and regulations when handling any batteries.
23. The warranty period for this device as a whole is one year. Consumables (such as batteries), adapters, power cords, and other accessories are not covered by the warranty. Unauthorized repairs will void the warranty and will incur charges.
24. Please check the status and power of the lithium battery upon receipt. If there are any quality issues, please contact Godox or our authorized dealer within the warranty period.
25. Failures from improper operation is not covered under warranty.
26. When using the product with an adapter (e.g., in charging mode), the maximum ambient temperature must not exceed 40°C.

Contents

- 01 **Foreword**
- 01 **Key Features**
- 02 **What's Inside**
- 03 **Names of Part**
 - Controller
 - Flash Head
 - Adapter Ring
 - Display
- 06 **Install and Remove**
 - Battery
 - Controller
 - Flash Head
 - Diffuser
- 08 **Power Switch**
- 08 **Flash Mode**
 - TTL Auto Flash
 - M Manual Flash
- 10 **Operation Mode**
 - TX Transmitter Mode
 - RX Receiver Mode
- 11 **Menu Setting**
- 13 **Other Function Settings**
 - Modeling Lamp
 - Locking Function
 - Sync Jack Triggering
 - Factory Reset
- 14 **Wireless Multi-Flash Photography (2.4G Wireless Transmission)**

TTL: Wireless Multiple Flash Shooting in TTL Auto Flash Output Mode

M: Wireless Multiple Flash Shooting in M Manual Flash Output Mode

Wireless Multiple Flash Shooting in Different Flash Modes

16	The Reason & Solution of Not Triggering in Godox 2.4G Wireless
17	Over-Temperature Protection
18	Other Protections
19	Troubleshooting
20	Compatible Camera Models
20	Firmware Upgrade
21	Technical Data
22	Maintenance

Foreword

Thank you for purchasing a Godox product!

The MF-T76 is a TTL Macro Twin Flash with adjustable angles, suitable for macro photography subjects such as insects, plants, jewelry, and dental work.


- MF - T76 C: For Canon cameras
- MF - T76 S: For Sony cameras
- MF - T76 N: For Nikon cameras

Note: The product images and interface displays in this manual are based on the MF-T76 C.

Key Features

- **Dual Flash Units:** Independent settings for both flash tubes. Flash angles are adjustable using the included mounting ring.
- **2.4G Wireless X System:** Supports switching between Transmitter and Receiver modes.
- **Precise Light Control:** Power range from 1/256 to 1/1 in 1/3 increments.
- **Outstanding Performance:** Approx. 550 full power flashes on a full charge.
- **Built-in Modeling Lamp:** Brightness adjustable from 1 to 10 levels.

What's Inside

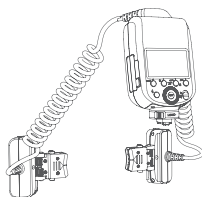


Flash Body ×1



Adapter ×1




Lithium Battery ×1



USB-C to USB-A
Cable ×1



Diffuser ×2

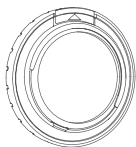

Adapter Ring ×1



49mm



52mm



55mm



58mm



62mm



67mm



72mm



77mm

Adapter Rings Kit AR-R Kit ×1




Storage Bag ×1





Instruction Manual ×1

Names of Parts


Controller

1. Display
2. < MODE > Button
3. <  > Modeling Lamp Button
4. < MENU/🔒 > MENU/LOCK Button
5. < RATIO > Button
6. < SET > Settings Button
7. Test Button / Recycle Indicator
(Green: Ready / Red: Recycling)
8. Select Dial
9. Power Switch Button
10. Hot Shoe Locking Ring
11. Hot Shoe
12. Battery Charging Indicator
(Green: Fully Charged / Red: Charging)
13. USB Charging Port
14. 2.5mm Sync Cord Jack
15. USB Upgrading Port
16. Battery Release Button
17. Lithium Battery


(Press and hold
at the same
time to reset)

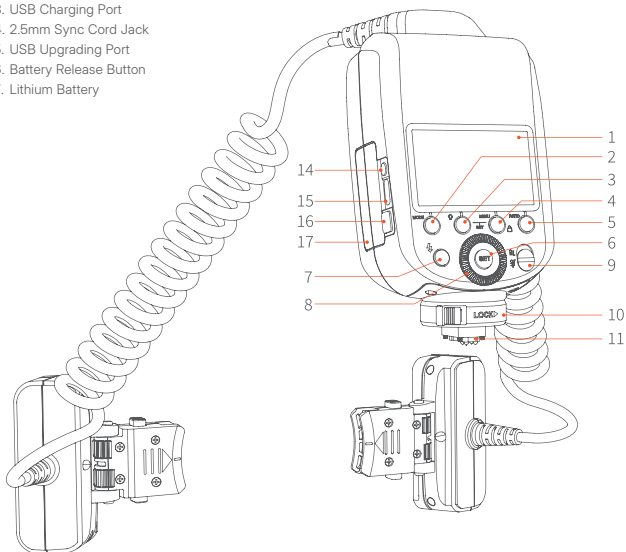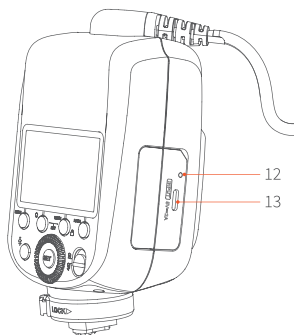


Flash Head

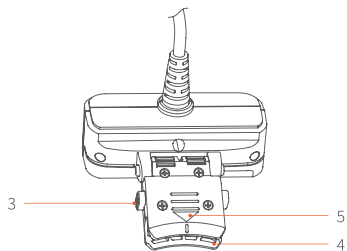

1. Flash Head A
2. Flash Head B
3. Flash Head Release Button
4. Installing Slot
5. Indicator Arrow
6. Modeling Lamp A
7. Modeling Lamp B

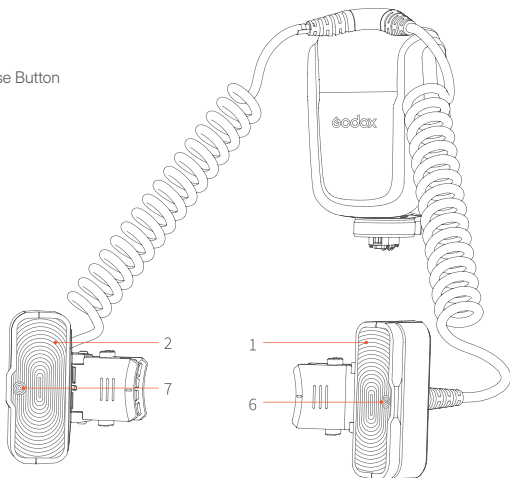


Adapter Ring

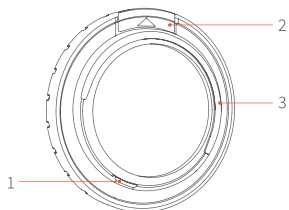

1. Detaching Mount
2. Installing Spot/Indicator Arrow
3. Adapter Ring Connecting Port


Display

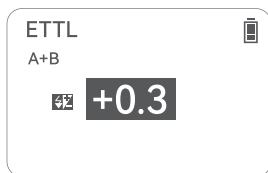


TTL Auto Flash Mode



M Manual Flash Mode

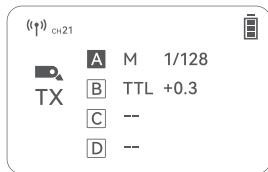

Transmitter

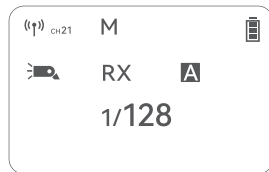


Receiver


Install and Remove

• Battery

Installation: Insert the battery into the battery compartment in the correct orientation as shown until it locks into place.

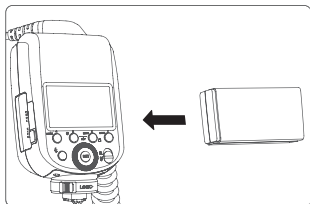

Removal: Press and hold the Battery Release Button, and slide the battery to the right to remove it.

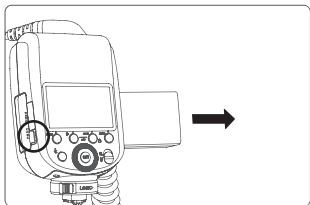


• Controller

Installation: Turn the Hot Shoe Locking Ring counter-clockwise to the top. Slide the hot shoe into the camera hot shoe, then turn the ring clockwise to lock.




Removal: Press and hold the release button on the locking ring, turn the ring counter-clockwise to unlock, and remove the controller.

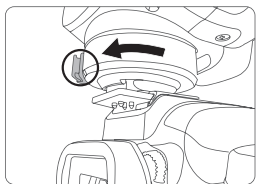


- Flash Head

Installation


→ Install the included lens adapter ring onto the camera lens.

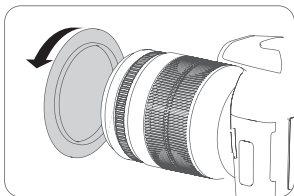

→ Hold the Mounting Position on the mounting ring. Insert the flash head in the correct orientation until it clicks into place.
→ Press and hold the release buttons on both sides of the flash head to adjust its position.


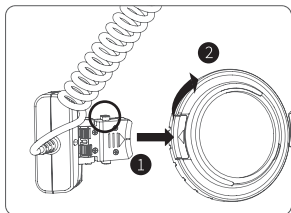


→ Align the mounting ring connector with the adapter ring, insert it vertically, and lock it into place.

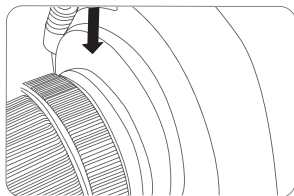



Removal

- Position the flash head at the mounting location and pull outward to detach.
- Pull the mounting ring outward to release the locking mechanism, then slide it upward to remove.

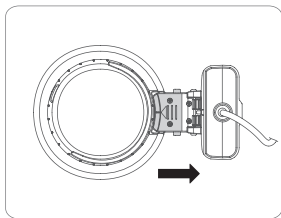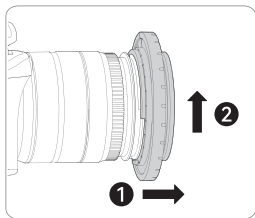

• Diffuser

Align the short bayonet mount with the upper slot on the flash head and the long bayonet mount with the lower slot. Push until it locks securely into place.

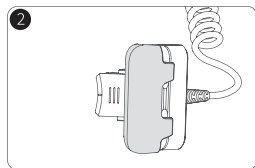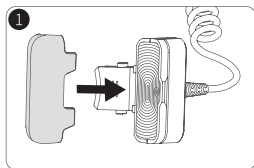

Power Switch

Power On: Slide the switch to the ON position.

Power Off: Slide the switch to the OFF position.

Flash Mode

Short press the < MODE > button to switch to TTL / M mode.

• TTL Auto Flash

The flash unit works with the camera's metering system to automatically adjust optimal flash output. This mode triggers a pre-flash before the shutter releases, allowing the flash to receive camera data for the main flash.

Flash exposure compensation: Range -3.0 ~ +3.0, Step:1/3

1. Set Overall Exposure Compensation

Short press the < RATIO > button to make "A+B" icon on the display. Turn the select dial to set exposure compensation.



2. A:B Flash Ratio Setting

Short press the < RATIO > button until "A : B" is displayed on the screen. Turn the Select Dial to set the flash ratio.(Range: 8 : 1 - 1 : 1 - 1 : 1 : 8, Step: 1 / 2).

Short press the < SET > button and turn the select dial to set the exposure compensation.



3. Set individual flash exposure compensation

Short press the < RATIO > button until "A" and "B" are displayed. Press the < SET > Button to switch between flash tube A and B, then turn the Select Dial to set the Flash Exposure Compensation.



- Note: 1. Adjust the FEB value to "±0.0" can cancel the FEB.
2. Flash ratio settings are as follow:



• M Manual Flash

Manually set the flash output. Range: 1 / 256 - 1 / 1, Step: 1 / 3

1. Overall Flash Ratio Setting


Short press the RATIO button until "A+B" is displayed. Turn the Select Dial to set the Flash.



2. A : B Flash Output Setting

Short press the RATIO button until "A" and "B" are displayed with individual power values.


Press the <SET> Button to switch between flash tube A and B, then turn the Select Dial to set the Flash.

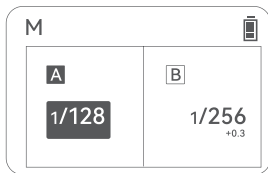

3. Single Group Flash Output Setting

Short press the RATIO button to make "A" and "B" icon and single group output value on the display.

Press the < SET > Button to switch between flash tube A and B, then turn the Select Dial to set the Flash.

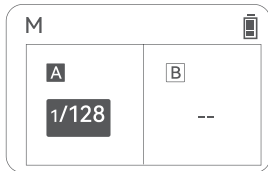

Operation Mode

- Short press the < MENU/☰ > button to enter the menu.
- Turn the Select Dial to select "WIRELESS", then press the < SET > Button to enter.
- Turn the Select Dial to cycle through OFF / TX / RX, then press the <SET> Button to confirm.
- Press the < MENU/☰ > Button to exit.

• TX Transmitter Mode


Wirelessly controls other Godox X system flashes.

Turn the Select Dial to select a group, then press the < SET > Button to enter. Press the < MODE > Button to switch among TTL / M / -- (OFF). Turn the Select Dial to Flash Exposure Compensation or power output.

Transmitter Groups:

Groups A, B, C, D (MF-T76 C)

Groups M, A, B, C (MF-T76 S / N)

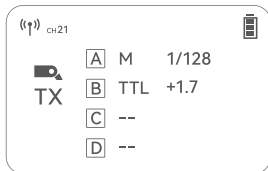

• RX Receiver Mode


Receives wireless trigger signals as a receiver unit.

Press the < SET > Button or turn the Select Dial to switch groups.

Receiver Groups:

Groups A, B, C, D (MF-T76 C)



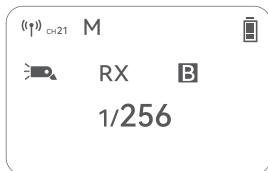




Groups A, B, C (MF-T76 S)



Menu Setting

- Short press the < MENU/☰ > button to enter.
- Rotate the select dial to choose an item.
- Short press the < SET > button and rotate the select dial to adjust settings.
- Short press the < SET > button to confirm and return to the previous menu.
- Short press the < MENU/☰ > button to exit the menu.


Level 1 Option	Level 2 Option	Description
WIRELESS	OFF	Turn off wireless
	TX	Turn on transmitter's wireless .The flash is in on-camera mode.
	RX	Turn on receiver's wireless
CH	01-32	32 channels

Level 1 Option	Level 2 Option	Description
ID	OFF	Turn off ID
TX FLASH (Available only on MF-T76C)		Turn off the transmitter's flash when using as a transmitter unit
		Turn on the transmitter's flash when using as a transmitter unit
TCM (Convert TTL metered value to M power value.)	OFF	Function unavailable
	ON	Short press the MODE button can realize TCM transform when this function is switched on. This function is unavailable in wireless flash or single port flash
SYNC		First curtain sync
		High speed sync (Minimum power in M mode is 1/32 in this state)
		Rear-curtain sync (Available only on MF-T76C in on-camera mode)
RF DIST	0.3-10m	Suitable for close-up photography
	1-100m	Suitable for long-distance photography
MODEL	 CONT	Turn on the modeling lamp, it will not go out when the flash fires
	 INTER	Turn on the modeling lamp, it will go out when the flash fires
STBY	ON	Turn on sleep mode. Enters sleep mode after 100 seconds of inactivity
	OFF	Function unavailable
RX STBY	60 mins	Enter sleep mode after 60 minutes of idle use when using as a receiver unit
	30 mins	Enter sleep mode after 30 minutes of idle use when using as a receiver unit
	OFF	Turn off sleep mode when using as a receiver unit
BL	12 secs	Backlight off over 12 seconds of idle use
	OFF	Display Backlight: Off
	ON	Display Backlight: Always On
LCD	-3~+3	The contrast ration can be set in7 levels

Other Function Settings

• Modeling Lamp

- Long press the < Q > button to enter settings.
- Short press the < SET > button to switch between Modeling Lamp A and B.
- Short press the < Q > button to turn the lamp on or off.
- When turned on, rotate the select dial to adjust brightness (Range: 01-10).
- Long press the < Q > button to return to the main interface.

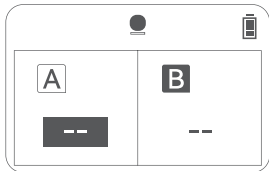


Quick Control in Main Interface:

Short press once: Turn Modeling Lamp A on/off.

Short press twice: Turn Modeling Lamp B on/off.

• Locking Function


Long press the < MENU/⏏ > button to lock or unlock the display.

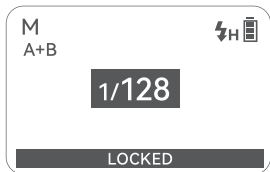

Note: Long press the < MENU/⏏ > button won't work in menu interface means it's not locked.


• Sync Jack Triggering

Featuring a $\phi 2.5$ mm specification, the Sync Cord Jack accepts a sync cable or trigger plug to fire the flash.

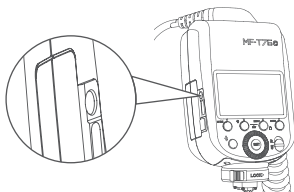

• Factory Reset

Long press the $\langle \text{Q} \rangle$ button and the $\langle \text{MENU}/\text{A} \rangle$ button until, "RESET" icon appears on the display, the icon disappears means resetting is completed.

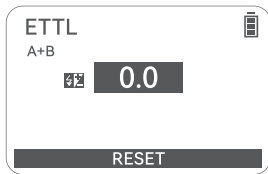

Wireless Multi-Flash Photography (2.4G Wireless Transmission)

This chapter describes how to use the MF-T76 as a transmitter for wireless multi-flash photography when paired with flashes featuring 2.4G wireless receiving functions (sold separately).

Compatible models include:

Outdoor Flashes: AD100Proll, AD200Proll, AD600Proll, AD600BMII, etc; On-camera Flashes: MF-T76, iT32, iT30Pro, V100, V480, etc; Retro Flashes: LUX Master, etc.


In this chapter, the MF-T76 mounted on the camera is referred to as the "Transmitter," and the controlled flashes are referred to as "Receivers."

Note:

- 1.Ensure the transmitter and receivers are set to the same channel, group, and wireless ID.
- 2.The MF-T76 is compatible with various receiver models; those listed above are for reference only.
- 3.The MF-T76 S transmitter does not support Group D.


• TTL: Wireless Multiple Flash Shooting in TTL Auto Flash Output Mode

Set the transmitter groups (A, B, C, D) to TTL mode and adjust the exposure compensation. Receivers will fire automatically based on their assigned group settings.

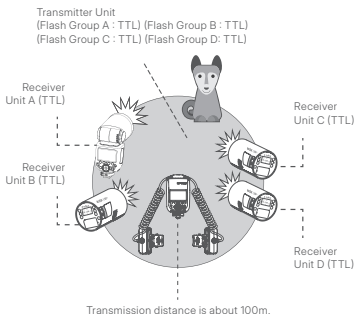


• M: Wireless Multiple Flash Shooting in M Manual Flash Output Mode

Set the transmitter groups (A, B, C, D) to M mode and adjust the power output. Receivers will fire automatically based on their assigned group settings.

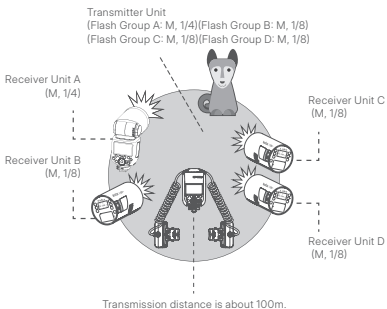

• Wireless Multiple Flash Shooting in Different Flash Modes

Set the transmitter groups (A, B, C, D) to different flash modes and adjust the exposure compensation or power output. Receivers will fire automatically based on their assigned group settings.

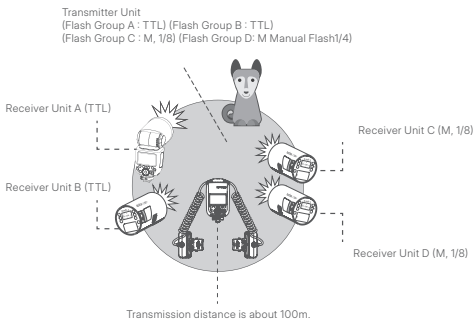

- Note: 1. When the camera is set to fully automatic mode or program image control area mode, the operations in this chapter cannot be achieved. The wireless flash shooting can be achieved when the camera is set to P/Tv/Av /M/B (creative shooting).
2. Do not set obstacles between the transmitter and the receivers to avoid interference.
3. Please conduct flash test and shooting test before wireless multiple flash shooting.

The Reason & Solution of Not Triggering in Godox 2.4G Wireless

1. Disturbed by the 2.4G signal in outer environment (e.g. wireless base station, 2.4G wifi router, Bluetooth, etc.)

→ To adjust the channel CH setting on the flash trigger (add 10+ channels) and use the channel which is not disturbed. Or turn off the other 2.4G equipment in working.

2. Please make sure that whether the flash has finished its recycle or caught up with the continuous shooting speed or not and the flash is not under the state of over-heat protection or other abnormal situations.

→ Please downgrade the flash power output. If the flash is in TTL mode, please try to change it to M mode (a pre-flash is needed in TTL mode).

3. Whether the distance between the the transmitter and receiver are too close to each other. (<0.5m).

→ Set the wireless distance (DIST) to 0.3–10m.

4. Whether the battery level is low.

→ Please replace the battery or charge it in time.

5. The flash's trigger's firmware is an older version


→ Please upgrade the firmware of the flash referring.

6. The camera's firmware is an older version

→ Please upgrade the firmware of the camera referring to the instruction manual for specific firmware upgrades.

Over-Temperature Protection

To avoid overheating and deteriorating the flash head, do not fire more than 40 continuous flashes in fast succession at 1/1 full power, or fire more than 30 continuous flashes in fast succession at 1/1 full power in HSS mode.

If you fire multiple continuous flashes mentioned below in short intervals, the inner overtemperature protection function may be activated and  is shown on the display. If this occurs, allow a rest time of about 10 minutes.

Number of flashes that will activate over-temperature protection:

Power Output Level	Number of Flashes
1/1, 1/2+0.7	40
1/2+0.3	50
1/2	60
1/4+0.3, 1/4+0.7	100
1/4	120
1/8 (+0.3, +0.7)	200
1/16 (+0.3, +0.7)	300
1/32 (+0.3, +0.7)	500
1/64 (+0.3, +0.7)	1000
1/128 (+0.3, +0.7), 1/256 (+0.3, +0.7)	2000

Number of flashes that will activate over-temperature protection in HSS mode:

Power Output Level	Number of Flashes
1/1	30
1/2 (+0.3, +0.7)	30
1/4 (+0.3, +0.7)	34
1/8 (+0.3, +0.7)	40
1/16 (+0.3, +0.7)	50
1/32 (+0.3, +0.7)	

Other Protections

Prompts on the panel	Meaning
E0	A failure occurs on the temperature sensor inside the device, need to be repaired.
E1	A failure occurs on the recycling system so that the flash cannot fire. Please restart the flash unit. If the problem still exists, please send this product to a maintenance center.
E2	The system gets excessive heat. Please allow a rest time of 10 minutes.
E3	The voltage on two outlets of the flash tube is too high. Please send this product to a maintenance center.

Troubleshooting

Please refer to the guide table below when problems occur.

Problems	Possible Reasons	Solutions
Flash does not fire	Not correctly installed	Please mount the hot shoe of the flash securely on the camera.
	The electronic contacts of the flash and camera are dirty	Clean the electronic contacts of the flash and camera.
Power down automatically	The power will automatically shut down over 90s of idle use when using as a transmitter unit and the STBY is on.	Press any button to wake up
	The power will automatically shut down over 60min or 30min of idle use when using as a receiver unit and the RX STBY is set as 60mins or 30mins.	Press any button to wake up
Can not boot up	Battery runs out or damages	Please charge or replace the battery.
Flash does not fire as a receiver unit	The receiver's flash group is incorrect. For example, group B of the transmitter is off but the receiver is set as group B.	Set the flash group of receiver correctly.
	The channels of transmitter and receiver are inconsistent.	Please set the channels of transmitter and receiver to the same, e.g., set the channel of transmitter to 01, and receiver's to 01 as well.
	The receiver is out of the transmission distance of the transmitter.	Please set the receiver within the transmission distance (0-100m) of the transmitter.
	The transmitter and receiver are too close for transmission.	Please set the triggering distance in MENU-RF DIST as 0.3m to 10m.

Compatible Camera Models

MF-T76 C (For Canon):

A type cameras: 80D, 90D, 7D, 6D, 70D, 750D, 760D, 5DMarkIV, EOS 1DX, 6DMarkII, 77D, 800D, 5DMarkIII, 5DMarkII, 60D, 7D Mark II, 200DII, 1500D, 3000D

B type cameras: 600D, 50D, 30D, 500D, Digital X

C type cameras: M5, M50, R, RP, R7

MF-T76 S (For Sony):

α77II, α99, a77, DSC-RX10, α6000, α7R, α350, α7RII(4.0), α7RIII, α7M3, α9, α7RIV, α7R5, α7MIV, ZV-E10, A9III, A7C, A7CII, a6400, α6500

MF-T76 N (For Nikon):

D800, D750, D700, D610, D500, D200, D300S, D5, D4, D810, D780, D5300, D5200, D5100, D5000, D3300, D3100, D60, Z6, Z7II, Z8, ZFC

- Note: 1. This table only lists the tested camera models. For the compatibility of other models, a self-test is recommended.
2. A type cameras doesn't support 2.4G wireless second curtain sync, B type cameras doesn't support 2.4G wireless second curtain sync and Gr mode, C type cameras doesn't support 2.4G wireless second curtain sync and AF focus assist beam.
3. Rights to modify this table are retained.

Firmware Upgrade

Visit the official Godox website at <https://www.godox.com.cn/firmware-G3/> to download the Godox G3 software and the latest firmware file.

Connect: With the device powered off, connect it to a computer using the included USB-C cable.

Upgrade: Open the Godox G3 software, select the firmware file, and execute the upgrade.

Technical Data

Product Name	Macro Twin Flash
Model	MF-T76 C / MF-T76 S / MF-T76 N
Flash Power (1/1 step)	76Ws
Guide No. (1/1 step)	Approx. GN22.4 (ISO100, in meters)
Flash Power Range	1/1-1/256 (with $\pm 1/3$ increment)
FEB	± 3 step, with $\pm 1/3$ increment
Flash Duration (t0.1)	1/700s~1/19300s
Number of Flashes (1/1 step)	Approx. 550
Recycle Time (1/1 step)	Approx. 1.2s
Flash Mode	TTL Flash, M (Manual) Flash
Flash Head Angle	0°~150°
Modeling Lamp Power	1W×2
Modeling Lamp CCT	4800K±300K
Wireless Transmission Distance	0-100m
CH	32 groups: 01-32
ID	99: 01-99
HSS	Yes
Second Curtain Sync	Yes
First Curtain Sync	Yes
Lithium Battery	7.2V/2980mAh
Working Environment Temperature	-10~50°C
Flash Head Dimension (excluding connecting cable)	2.97"×3.21"×1.18"
Controller Dimension (excluding connecting cable)	5.35"×2.78"×2.44"
Net Weight (excluding battery)	≈466g

Maintenance

Impact Protection: The device may malfunction if subjected to strong shocks or vibration.

Keep Dry: This product is not waterproof. Do not operate with wet hands or use in the rain, bathrooms, or other humid environments.

Temperature Precautions: Avoid sudden temperature changes, such as moving from a cold environment to a warm one, which may cause internal condensation. To prevent this, place the device in a protective bag beforehand to allow it to adjust to the temperature change.

Magnetic Interference: Keep away from strong electromagnetic field sources, such as radio transmitters, to prevent electromagnetic interference from affecting device performance.

Warning

Operating frequency: 2412.99MHz – 2464.49MHz

Maximum EIRP Power: 5dBm

Declaration of Conformity

GODOX Photo Equipment Co., Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.

For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

IC Warning

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux normes RSS exemptes de licence d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est soumis aux deux conditions suivantes:

- (1) Cet appareil ne doit pas provoquer d'interférences, et
- (2) Cet appareil doit accepter toute interférence, y compris celles qui pourraient provoquer un fonctionnement indésirable de l'appareil.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Tout changement ou modification non expressément approuvé par la partie responsable de la conformité pourrait annuler l'autorité de l'utilisateur à faire fonctionner l'équipement.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Remarque: Cet équipement a été testé et déclaré conforme aux limites imposées aux appareils numériques de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie de fréquence radio et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des

interférences ne se produiront pas dans une installation particulière. Si cet équipement provoque des interférences nuisibles à la réception radio ou télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est invité à essayer de corriger les interférences par une ou plusieurs des mesures suivantes :

- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre l'équipement et le récepteur.
- Connecter l'équipement à une prise sur un circuit différent de celui auquel le récepteur est connecté.
- Consulter le revendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Avertissement RF pour les appareils portables:

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences (RF). L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases:

① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Parts	Maintenance Period(month)	Warranty Service Type
Internal circuit board	12	Customer sends the roduct to designated site
Others (Flash tube, lamp body, lamp cover, locking device, cables, package, etc.)	No	Without warranty

Godox After-sale Service Call +86-755-29609320(8062)



Wechat
Official Account

GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen
518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com



QC PASS

Made in China godox.com 705-MFT76C-01
Copyright © 2026 Godox. All Rights Reserved.